


M9800 INSTALLATION INSTRUCTIONS

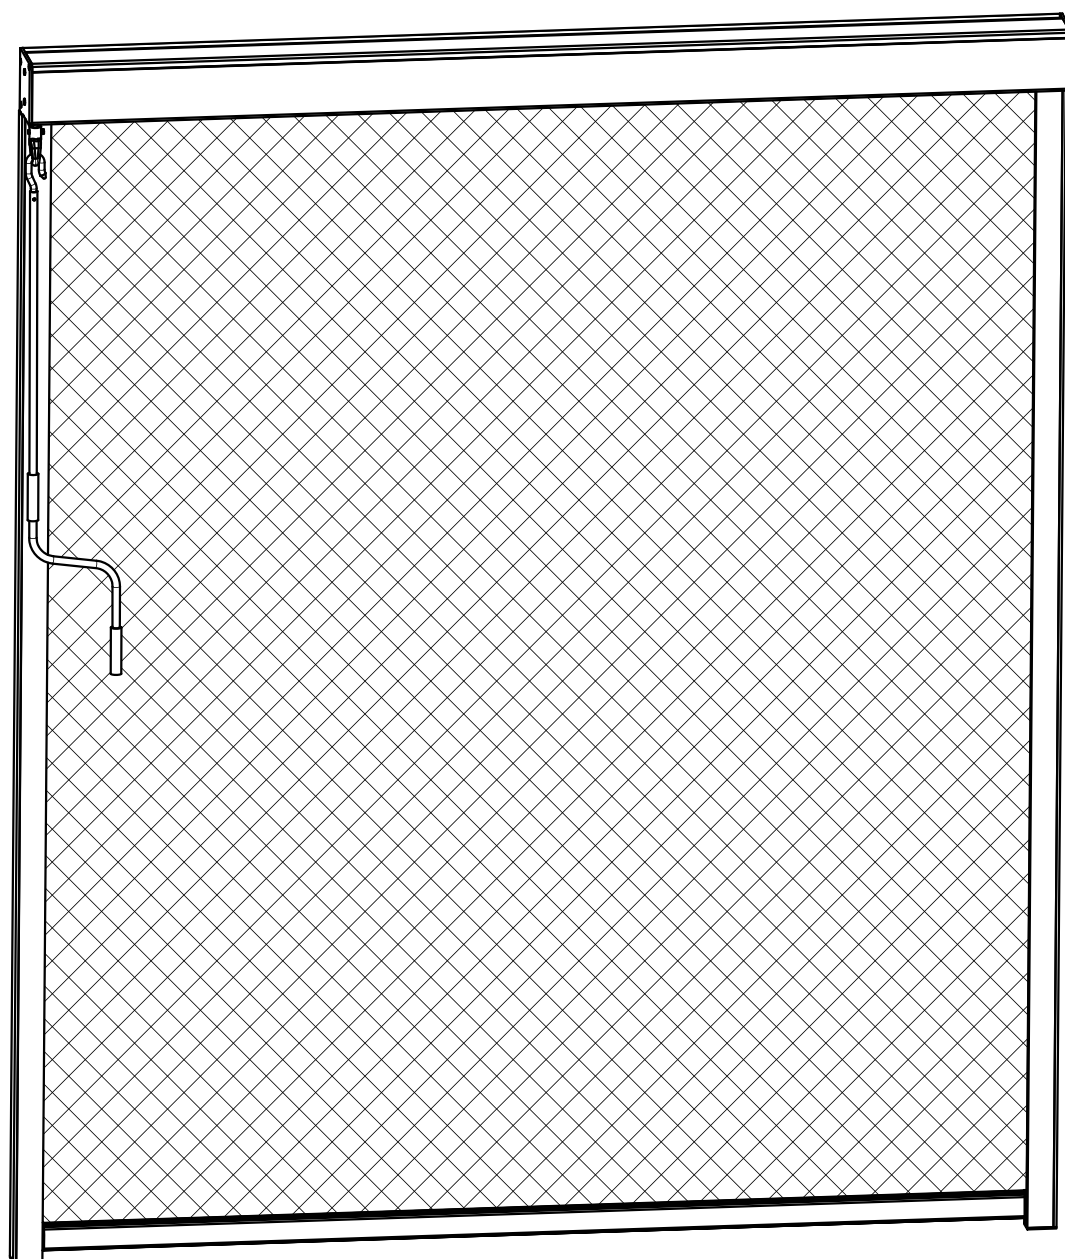


Accessories list


The name of accessories	Schematic diagram	Qty
The Principal module for 9800		1
Guide rail module for Installation		2
Guide rail module for insertion		2
Plastic fabric profile		2
self-drilling screw ST4.2X25		6
Instruction book		1
Hinge ring		1
Screw for hinge ring M4x25		1
Nuts for hinge ring M4		1
Hand crank		1

1. Assemble the guide rails and install the main frame


As shown below, insert the two installation guide rail components into the convex of the left and right end covers of the main component respectively.

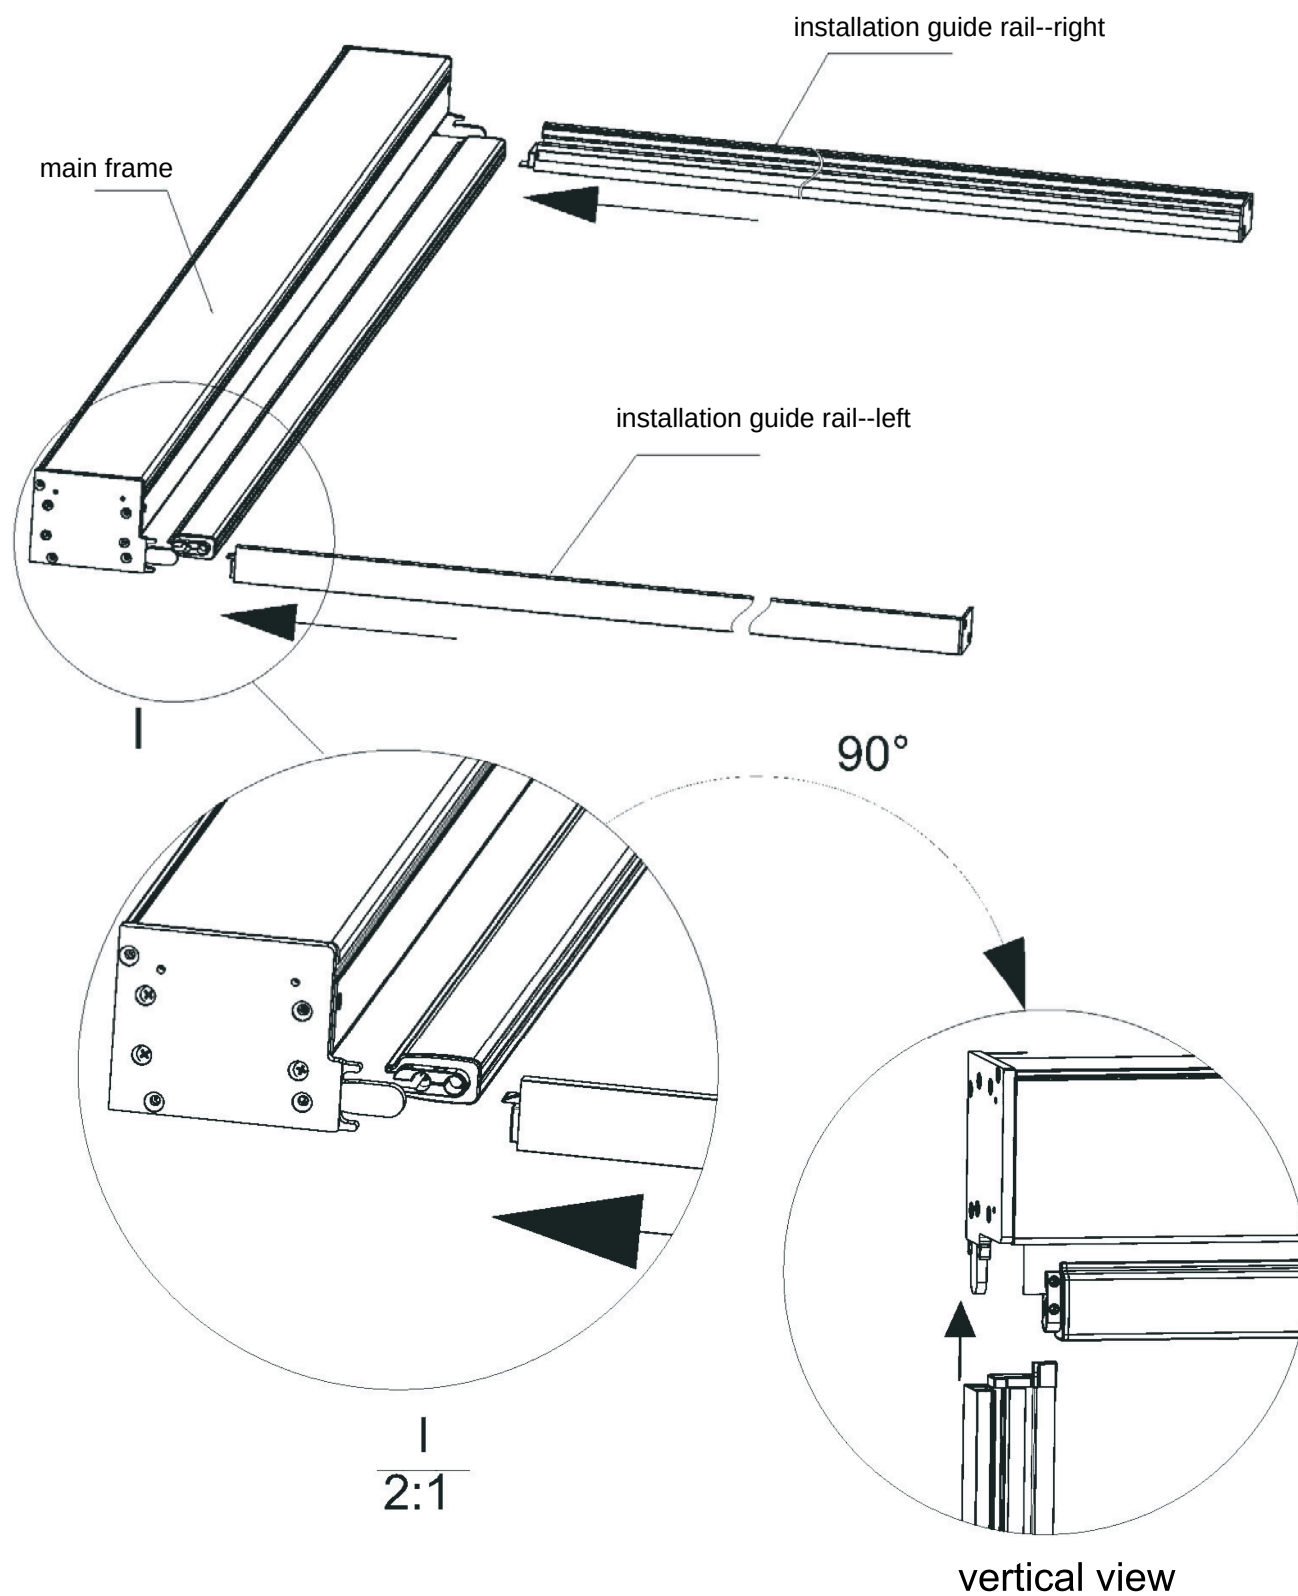

2.Lift the main frame up and move it into the installation area

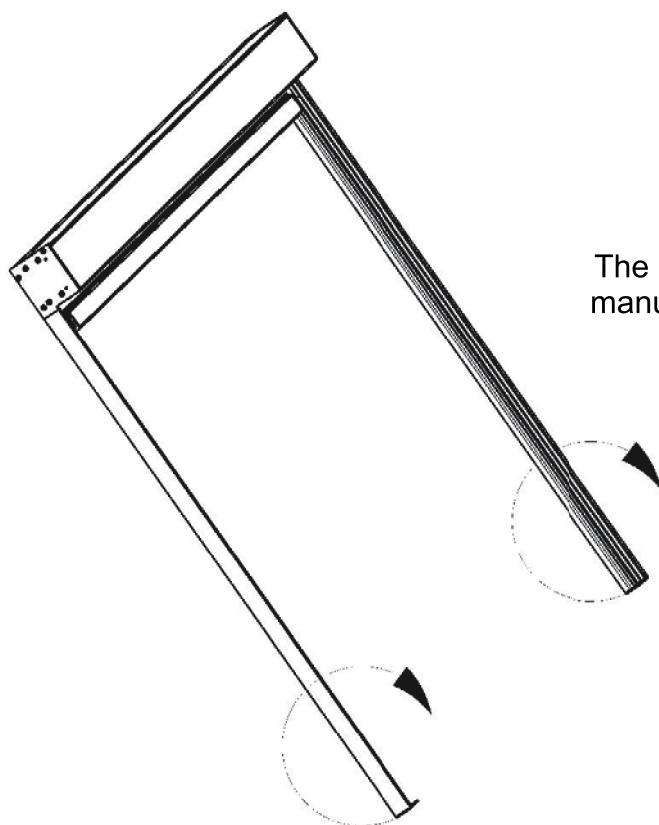

The main frame shall be held manually by two guide rails.

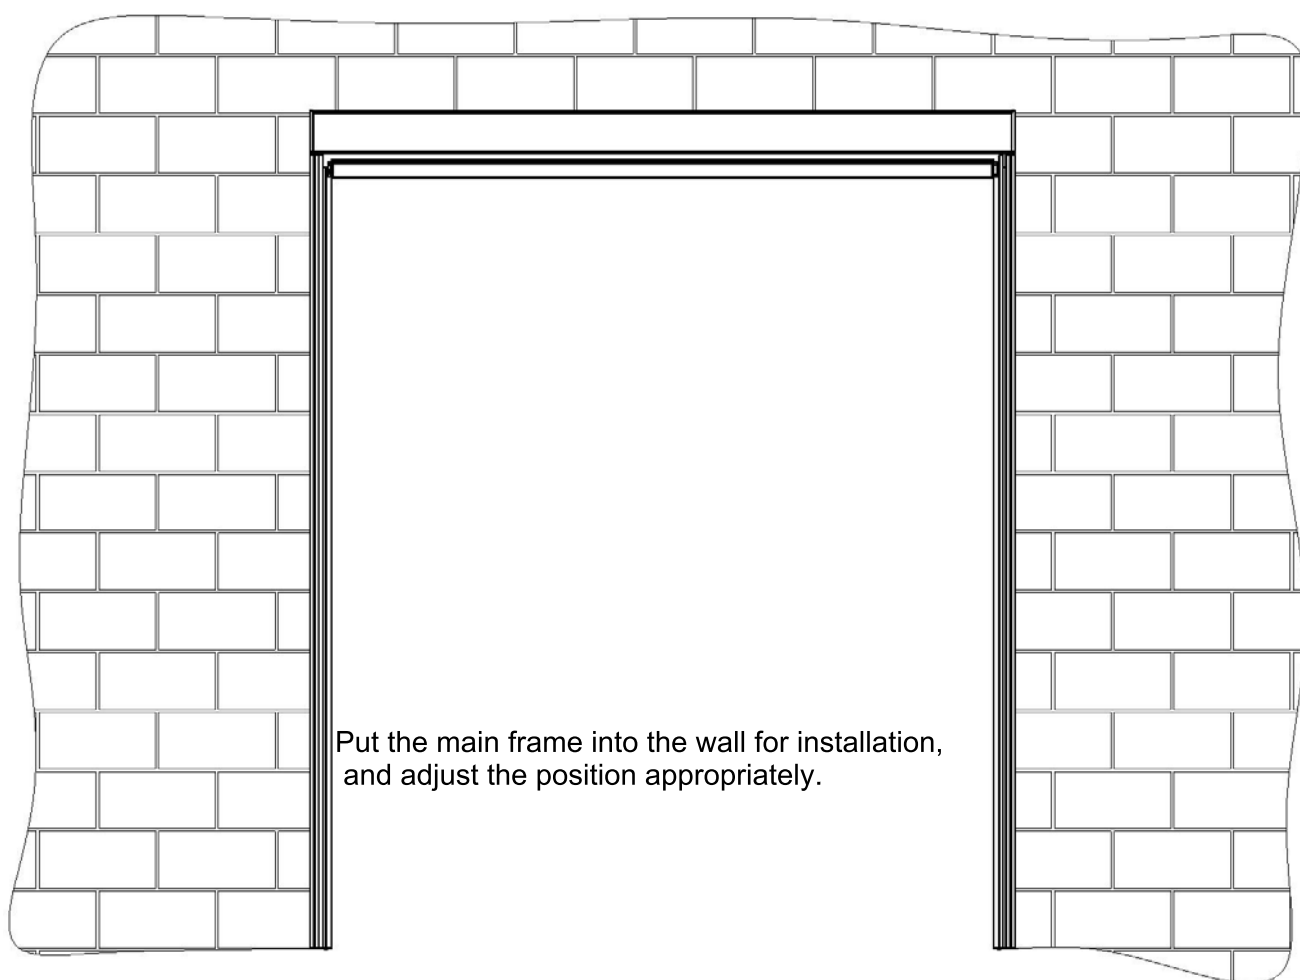


Put the main frame into the wall for installation, and adjust the position appropriately.

3. Fix the product on the wall

This product provides the following two options for installation, according to the specific situation of the installation location to choose.




Option A

The two guide rails are installed on the side of the two sections of the building.

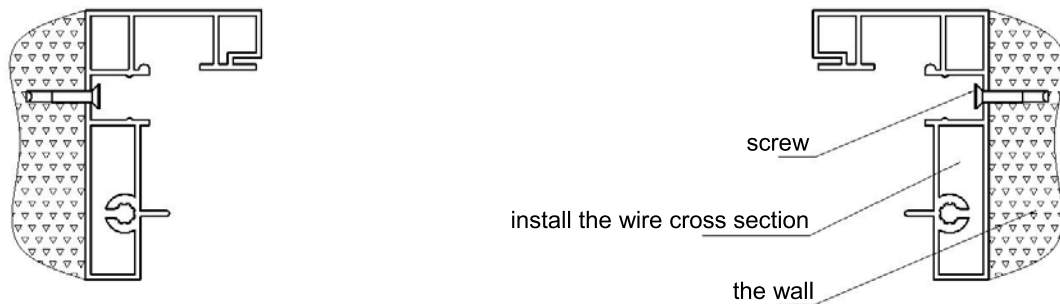


Option B

The two guide rails are mounted on the back of building.

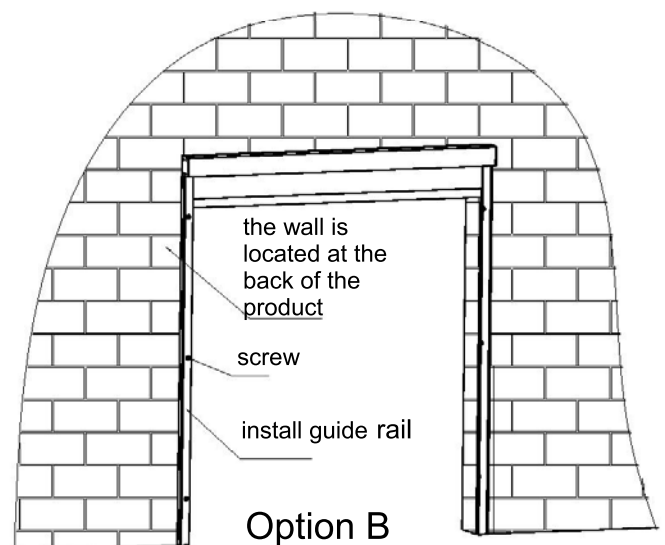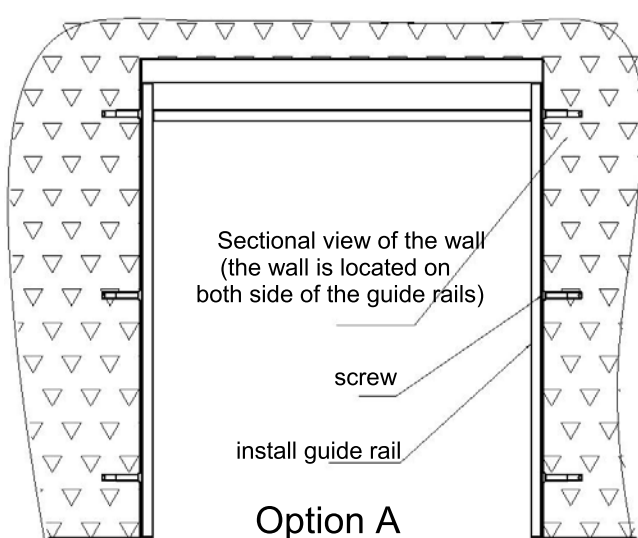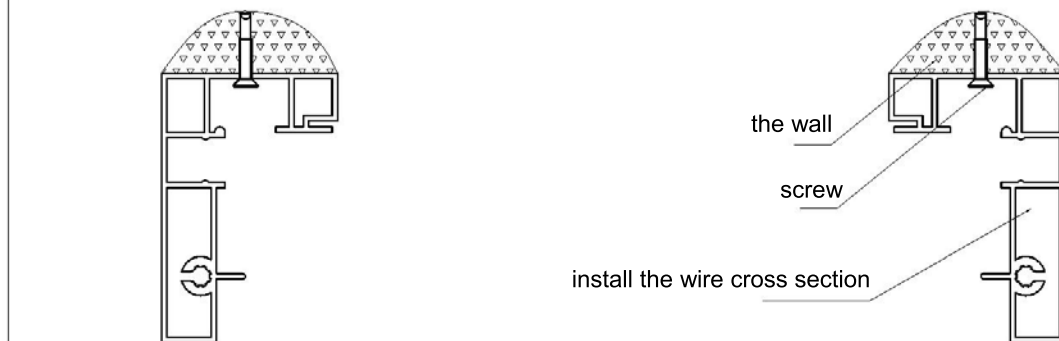


4. Install the plastic fabric profile

Clamp the left and right plastic profiles to the zipper edge on the left and right side of the cloth surface respectively and place the zipper edge into the mounting assembly

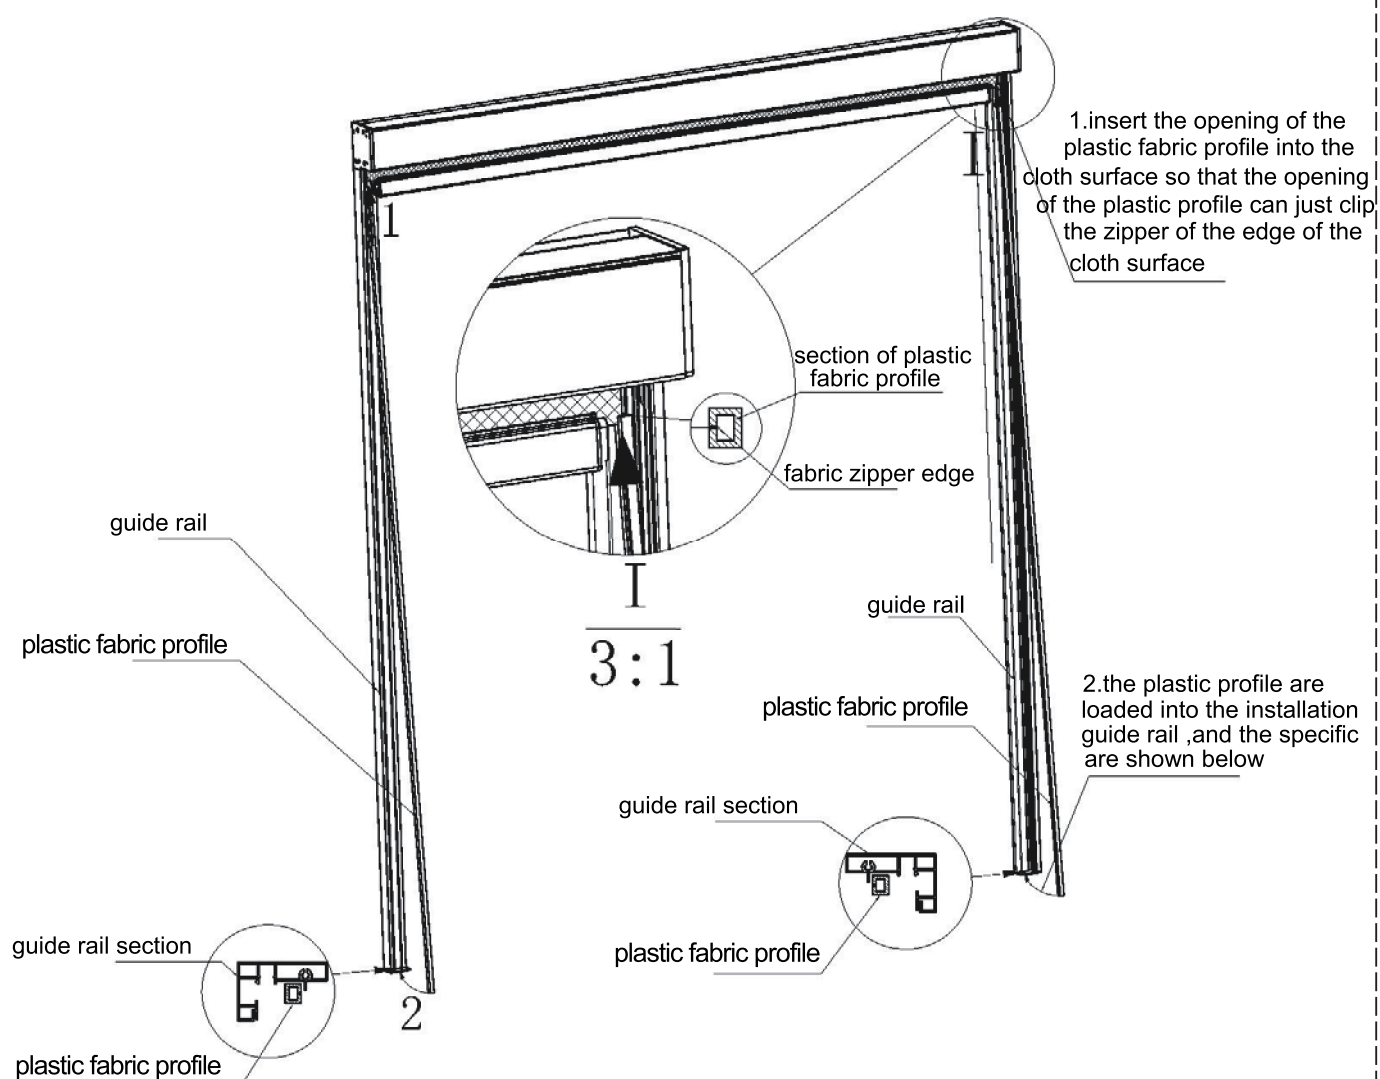

5.Pull down the fabric

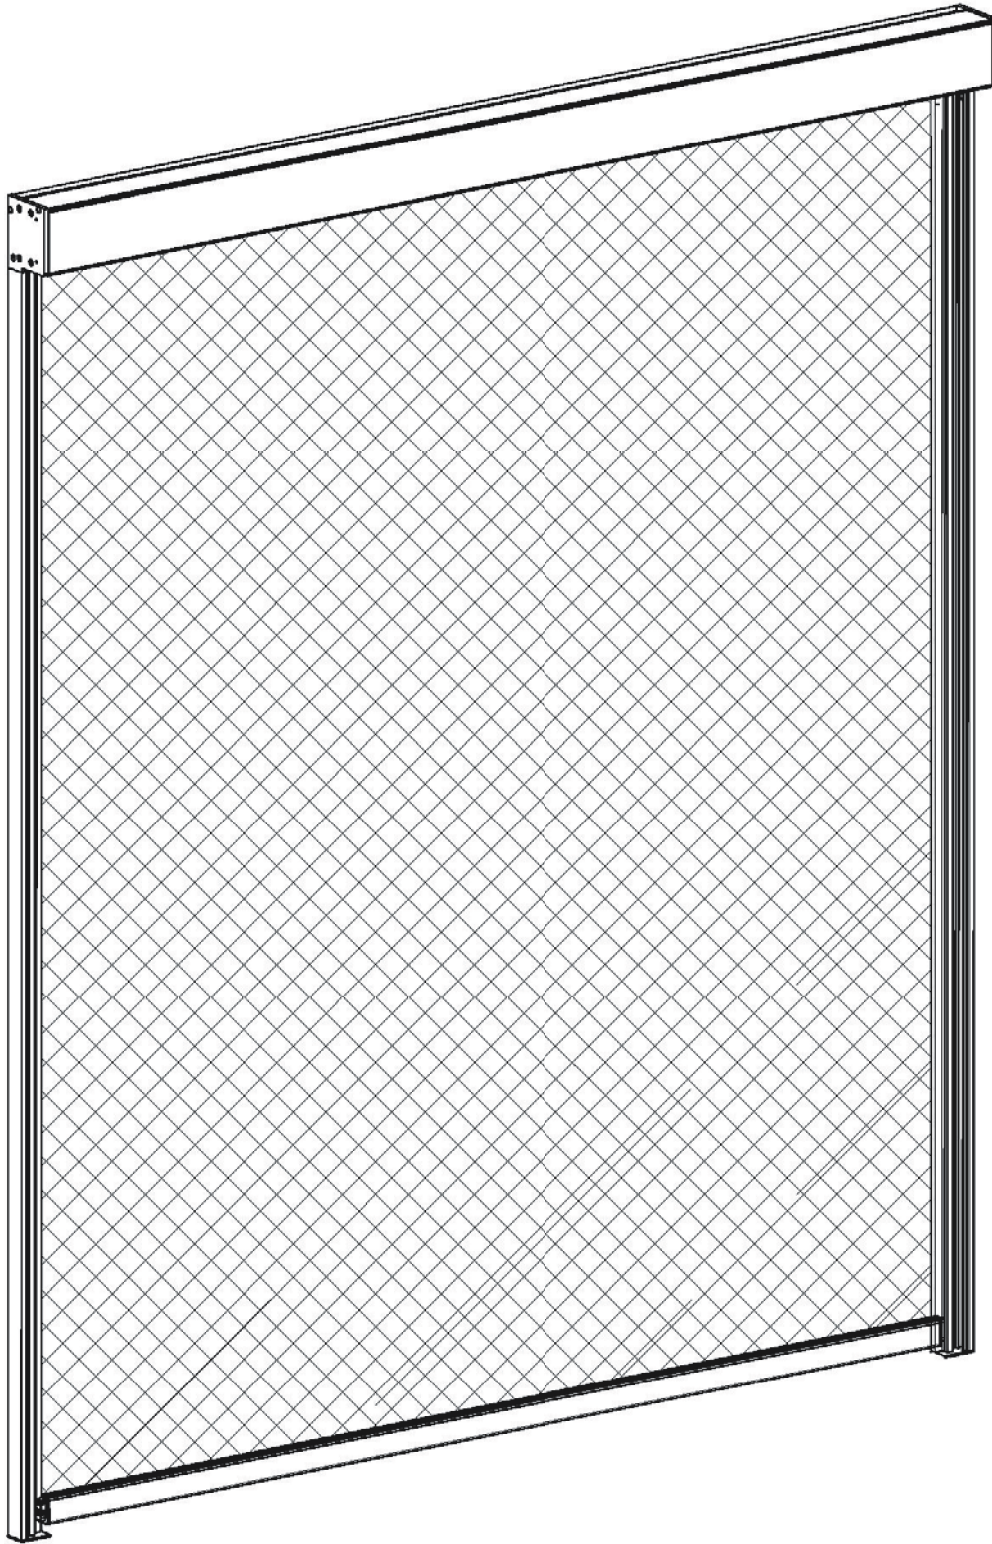

After installation of the plastic fabric profile, pull down the fabric entirely so as to adjust it, then install the insert guide rail according to the following steps.

6.install the insert guide rail

guide rail

insert guide rail

install the wire cross section

install the wire cross section

guide rail

install the wire cross section

fabric

plastic fabric profile

insert guide rail

Schematic diagram of guide rail section

Schematic diagram of guide rail section

Tip: The insert guide rail may be tight during the installation process. Wooden hammer or rubber hammer can be used to knock from bottom to side to make the two guide rails completely linked as the section view above.

Tip: The insert guide rail may be tight during the installation process. Wooden hammer or rubber hammer can be used to knock from bottom to side to make the two guide rails completely linked as the section view above.



7. Install hinge ring

2. Screw M4x25 with hinge ring

3. Lock with nut M4

1. Insert the hinge ring into the gearbox shaft

1
5:1

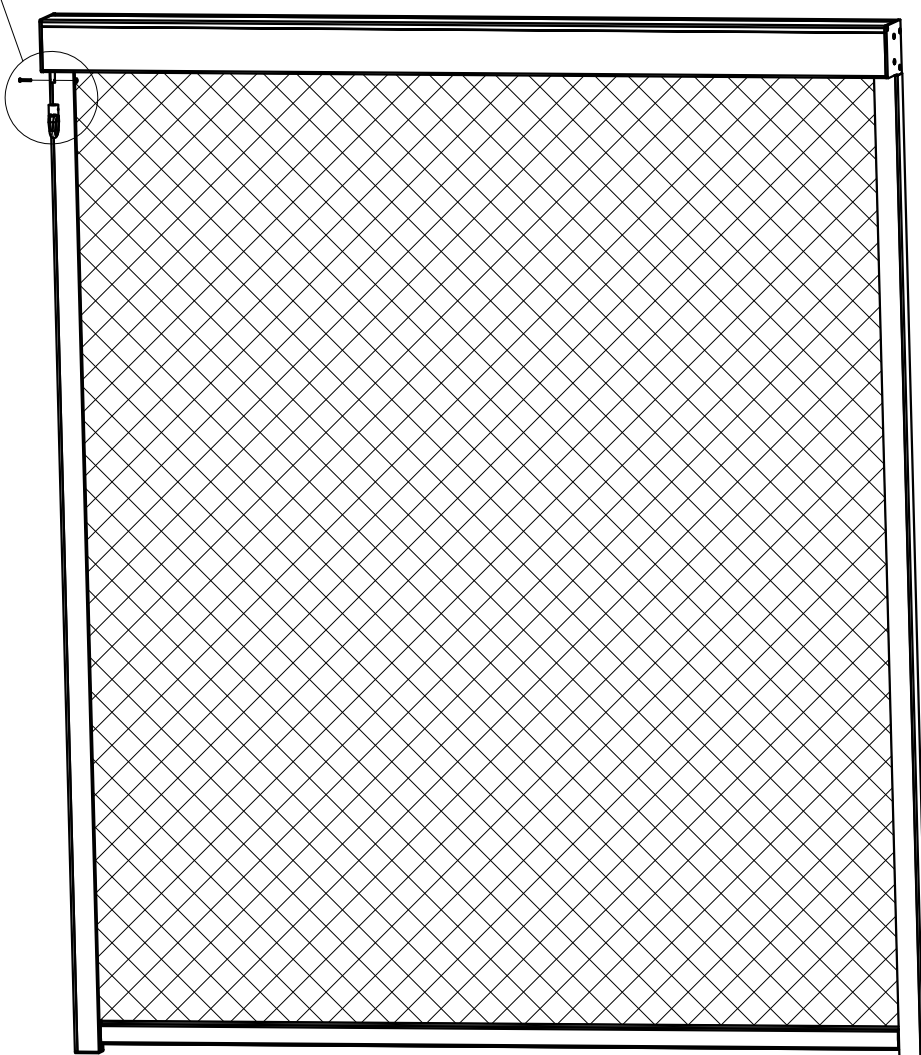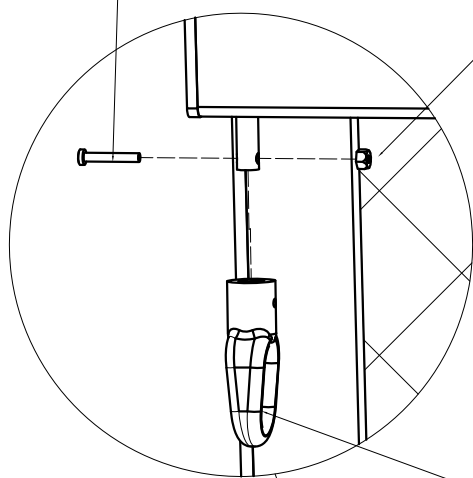

8. Turn the hand crank to operate

