


# SLANT HOUSE SUNLIGHT AWNING

## Instruction manual

size:224Lx141Wx238/261Hcm

---

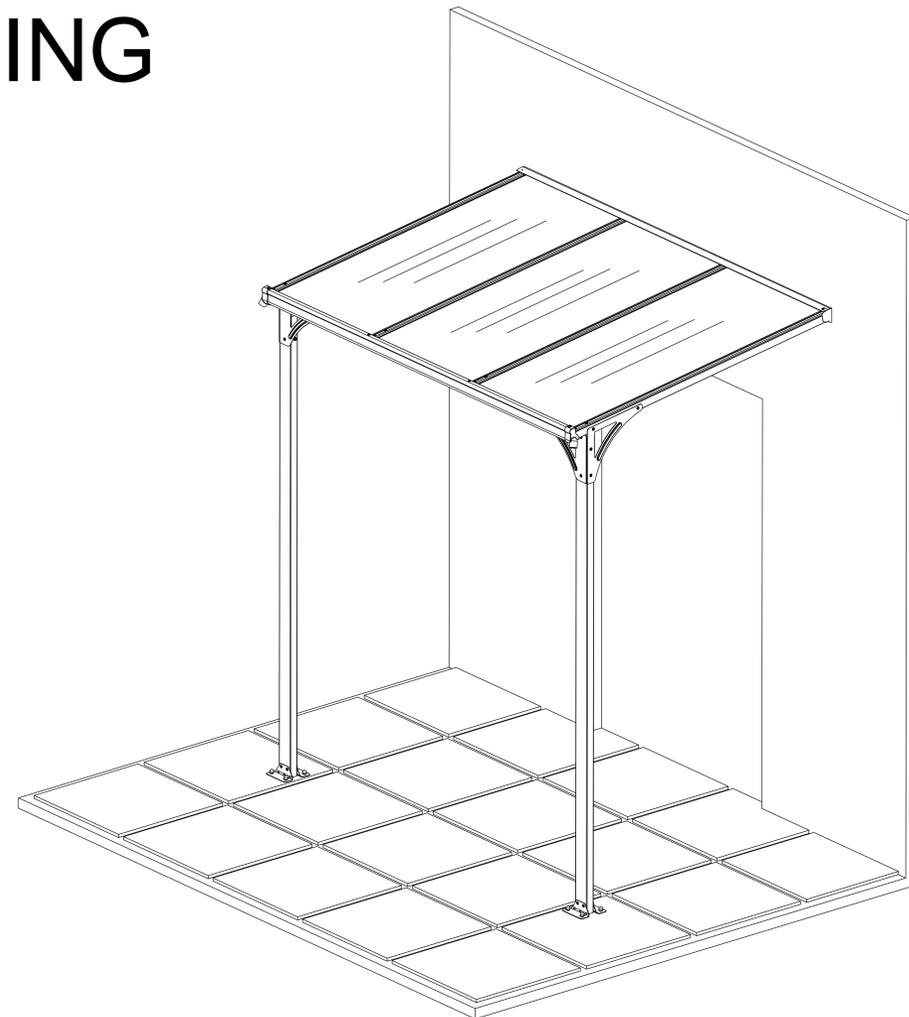

**QF-D150-3**

26/03/2023

### **IMPORTANT**

You must read these instructions carefully before you start to assemble this .Please ensure that you find all parts in the carton box in the correct type and quantity as mentioned in the list illustrated in every page accordingly.

Please carry out the steps in the order set out in these instructions.

Do not tighten the steps in the until completing on the assembly of the polycarbonate panels.

Keep these instructions in a safe place for future reference

## SAFETY ADVICE

We strongly recommend the use of work gloves during assembly.

Do not attempt to assemble the Aluminum Gazebo in windy or wet conditions,

Do not touch overhead power cables with the aluminum profiles.

Always wear shoes and safety goggles when working with extruded aluminum.

Dispose of all plastic bags safety-keep them out of reach of small children.

The Aluminum Gazebo must be positioned and fixed on a flat level surface.

Do not lean against or push the Aluminum Gazebo during construction.

Keep children away from the assemble area.

Do not position your Aluminum Gazebo in an area exposed to excessive wind.

Do not attempt to assemble this Aluminum Gazebo if you are tired ,have taken drugs or alcohol or if you are prone to dizzy spells.

If using a step ladder or power tools ensure that you follow the manufacturer's safety advice.

Hot items such as recently used grills, blowtorches etc.must not be stored in the Aluminum carport.

Ensure there are no hidden pipes or cables in the ground before inserting the pegs.

## GENERAL ADVICE

This is a multi-part assembly, Allow at least 90 minutes for assembly.

Selecting a site-choose a sunny level position away from overhanging trees.

If you are fixing your Aluminum Gazebo directly to a solid concrete foundation use the predrilled holes in the metal base supplied.

The component parts should be checked and laid out close to hand.

Keep all small parts(screws etc)in a bowl so they do not get lost.

Keep roof clear from snow and leaves.

## CARE & MAINTENANCE

When your Aluminum Gazebo needs cleaning, use a mild detergent solution and risen with cool clean water.

Do NOT use acetone, abrasive cleaners or other special detergents to clean the clear panels.

## TOOLS & EQUIPMENT REQUIRED


### Protective Equipment:

- 1.Helmet
- 2.Glove
- 3.Long Sleeve Cotton Overalls
- 4.Emergency Medicine Cabinet
- 5.Eye Shield



### Measure (metric):

- 1.The Tape (5 m)
- 2.Angle Square
- 3.Level Meter

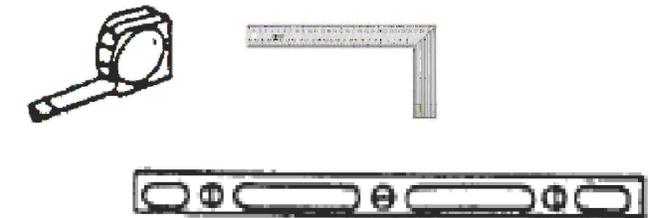

### Installation Tool:

- 1.Triangle Stairs≈1.5m Height
- 2.Spanner 10mm (Ratchet Wrench is better)
- 3.Spanner 14mm (Install the expansion screw)
- 4.Hexagon wrench 5mm
- 5.Electric screwdriver+5mm Hexagon wrench (suggest)
- 6.Wooden Mallet
- 7.Marking Pen
- 8.Silicon
- 9.Percussion bit(8mm and 10mm)
- 10.Knife
- 11.Phillips screwdriver




## PRODUCT SIZE

Make sure a good installation location

## OTHER CAUTIONS

1. 4-5 people required, one is for measuring & taking marks to ensure the installation dimension ,the second person is responsible for the installation and the last one do as assistant and assure the safety.
2. Firstly, make sure the gazebo is strong enough for installation. A brick concrete structures is the best choice.
3. High-power electric tools are required, ensure the normal work of them and highly pay attention to electric safety.
4. Be careful when using the kind of blunt tools, like hammer.
5. Wearing long sleeve cotton overalls,gloves and helmet during installation and wear safety glasses when using power tools .
6. Don't look up when Working in high position, or the drop screws may hurt your eyes and suffocation causing accidentally when falling into your mouth.
7. No climbing, No standing on the Gazebo to avoid falling down.
8. If injuries immediatly, using the first-aid kit to stop bleeding, bind up, In case of emergency, taken immediatly to a nearby medical institutions

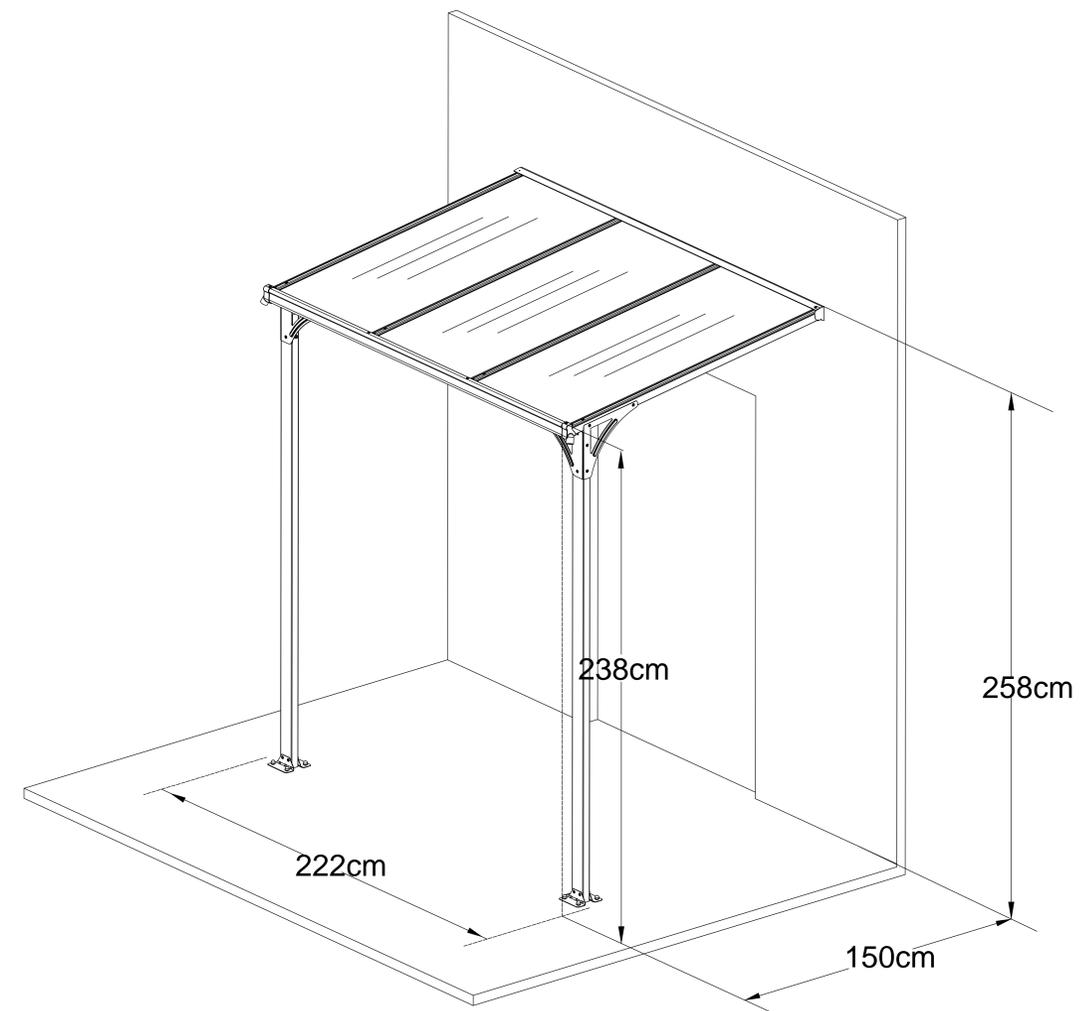



**Attention!**  
It is imperative that the ground surface be perfectly flat and leveled and in a 90° angle to the supporting wall.



**Achtung!**  
Es ist unbedingt erforderlich, dass die Bodenoberfläche ganz flach und gleichmäßig und in einem 90 Grad Winkel zur Stützmauer ist.



**Attention !**  
La surface du sol doit, impérativement, être parfaitement plate et nivelée et former un angle de 90° avec le mur de support.



**¡Atención!**  
Es imperativo que la superficie del suelo esté perfectamente plana y nivelada y en un ángulo de 90° con respecto al muro de apoyo.




**Pozor!**  
Je nezbytné, aby povrch země byl dokonale plochý a srovnán a zarovnaný do 90° úhlu k nosné zdi.









**Attention!**  
A pit larger than 30X30X30cm should be excavated at the column installation position




**Attention!**  
Each pit is reinforced with 4 bars, After pouring 30X30X30cm concrete, it can be installed after 15 days

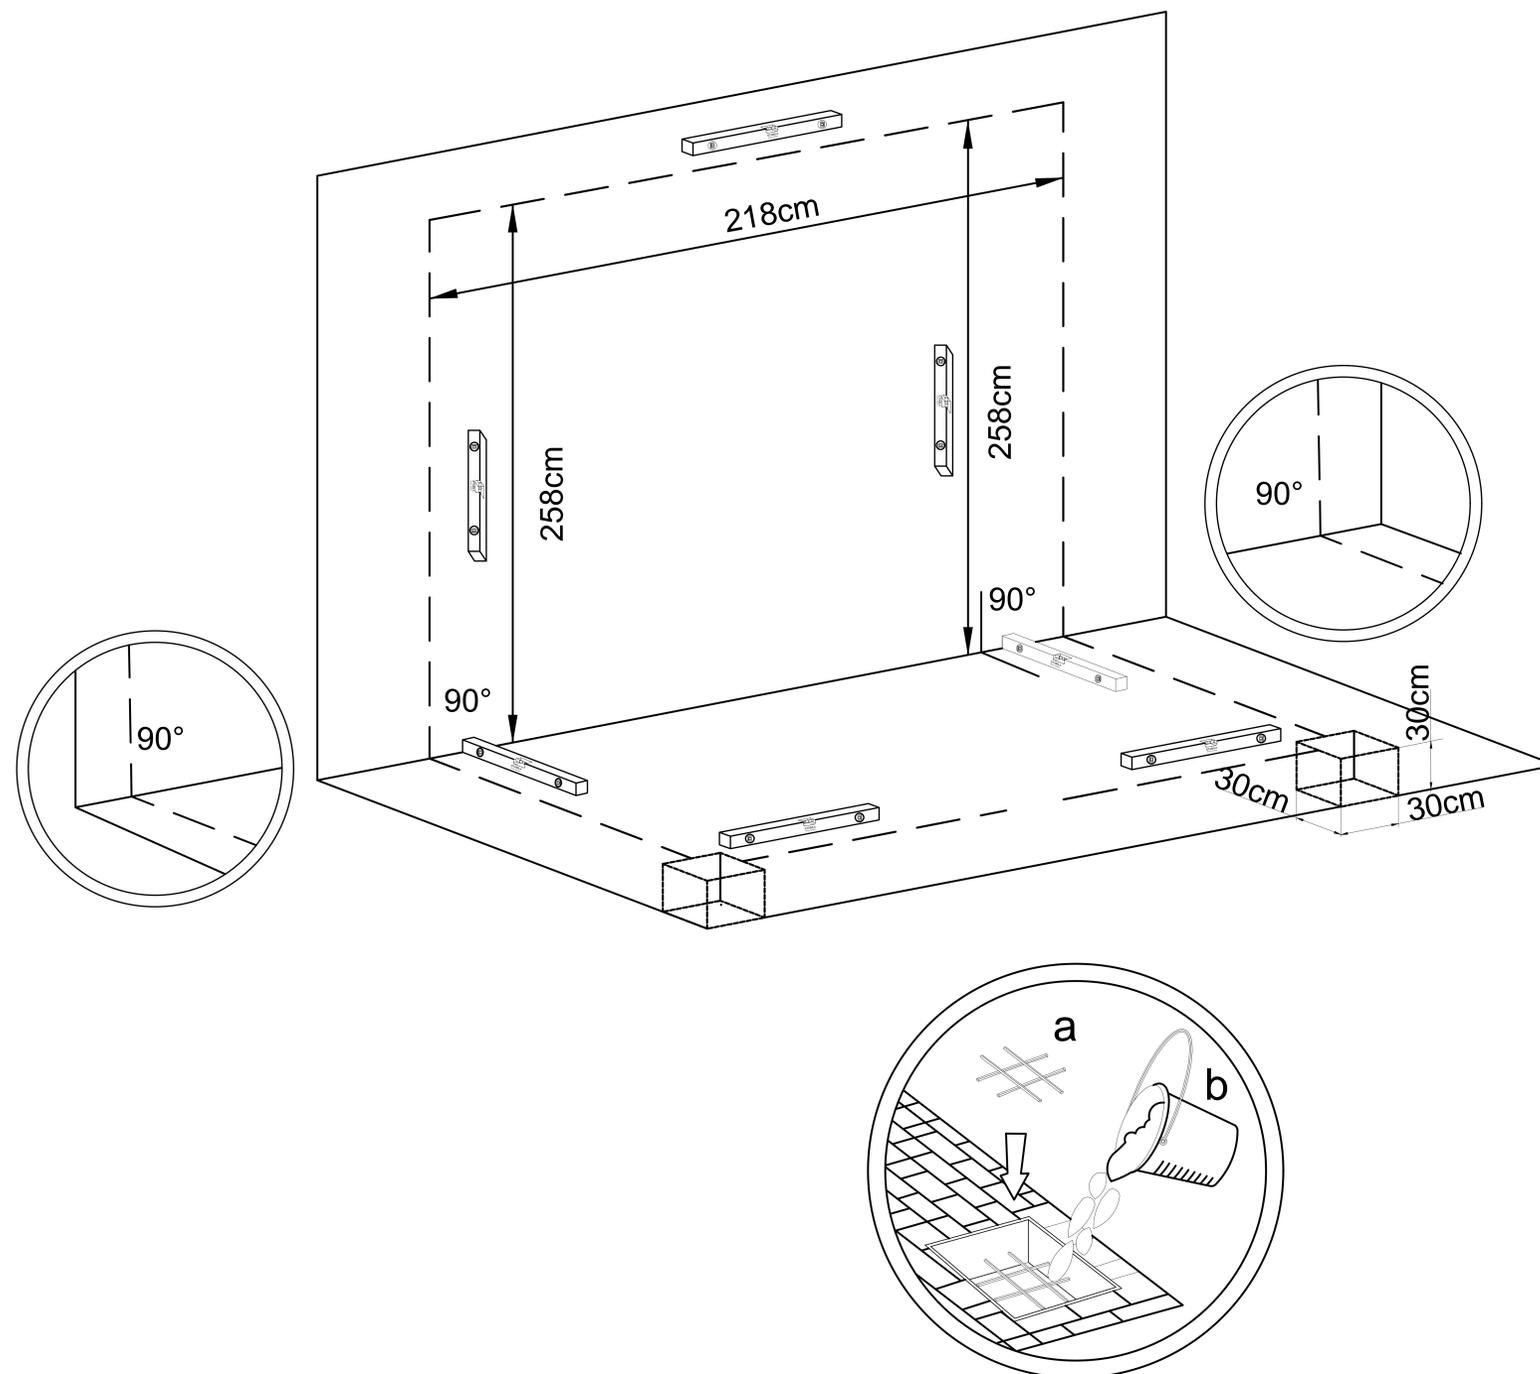


# Contents

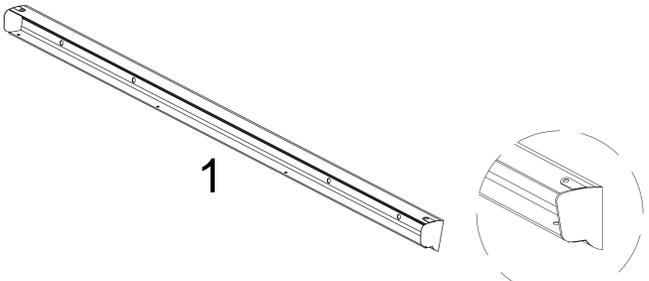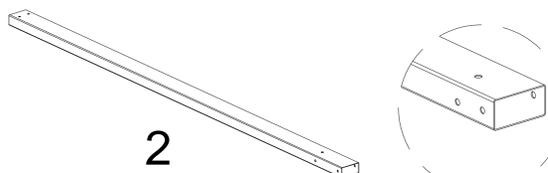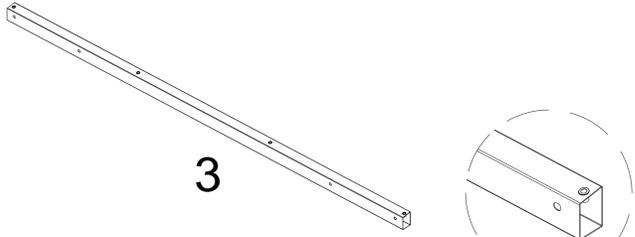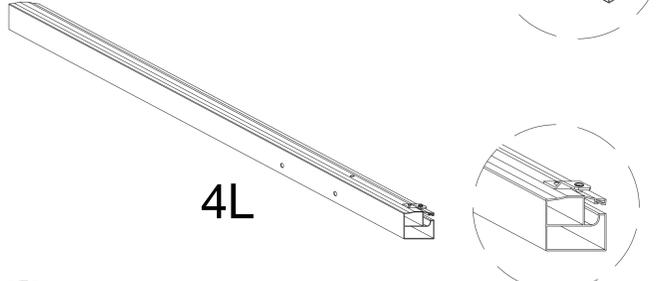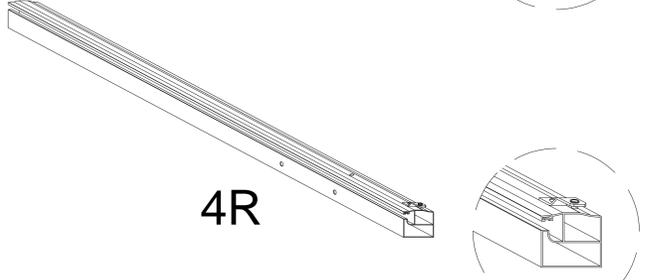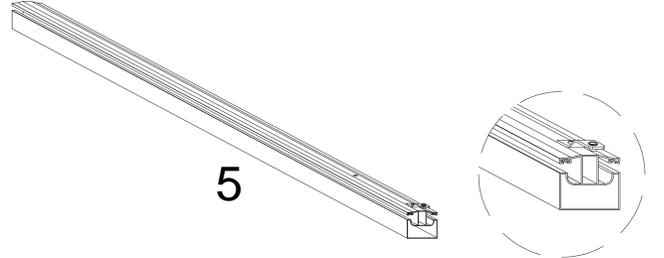
Item	Qty
 <p>1</p>	1
 <p>2</p>	2
 <p>3</p>	1
 <p>4L</p>	1
 <p>4R</p>	1
 <p>5</p>	2

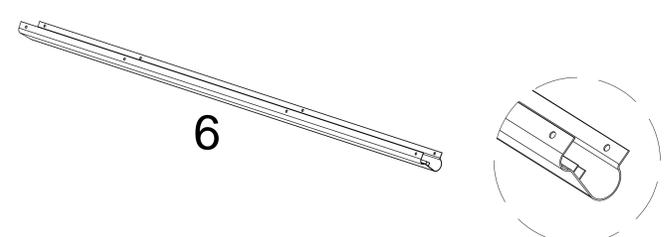Item	Qty
 <p>6</p>	1




Item	Qty	Item	Qty		
B2L		1	B3R		1
B2R		1	B1		4
B3L		1			

F1		M6x15	12	F4		M8x55	14	F7		M8	8
F2		M6x50	4	F5		M8	18	F8		GBT6x60	4
F3		M8x95	4	F6		M8x60	8				

S1L		1
S1R		1

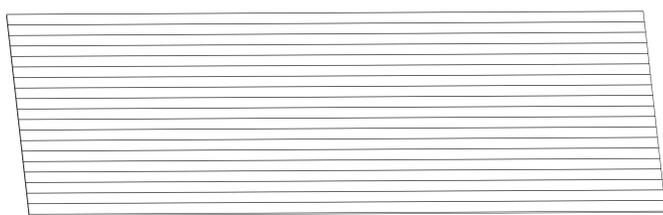P1		3
----	---	---









1

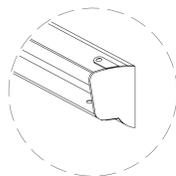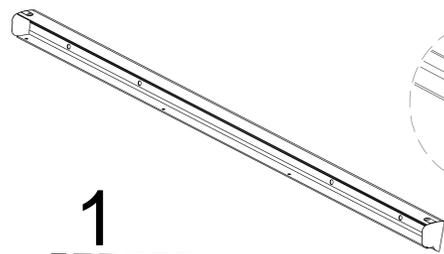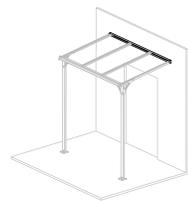









1 pcs






F8

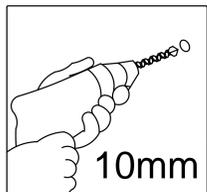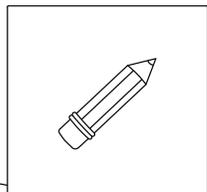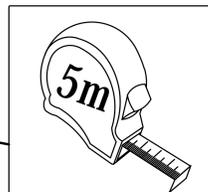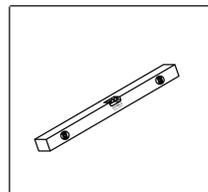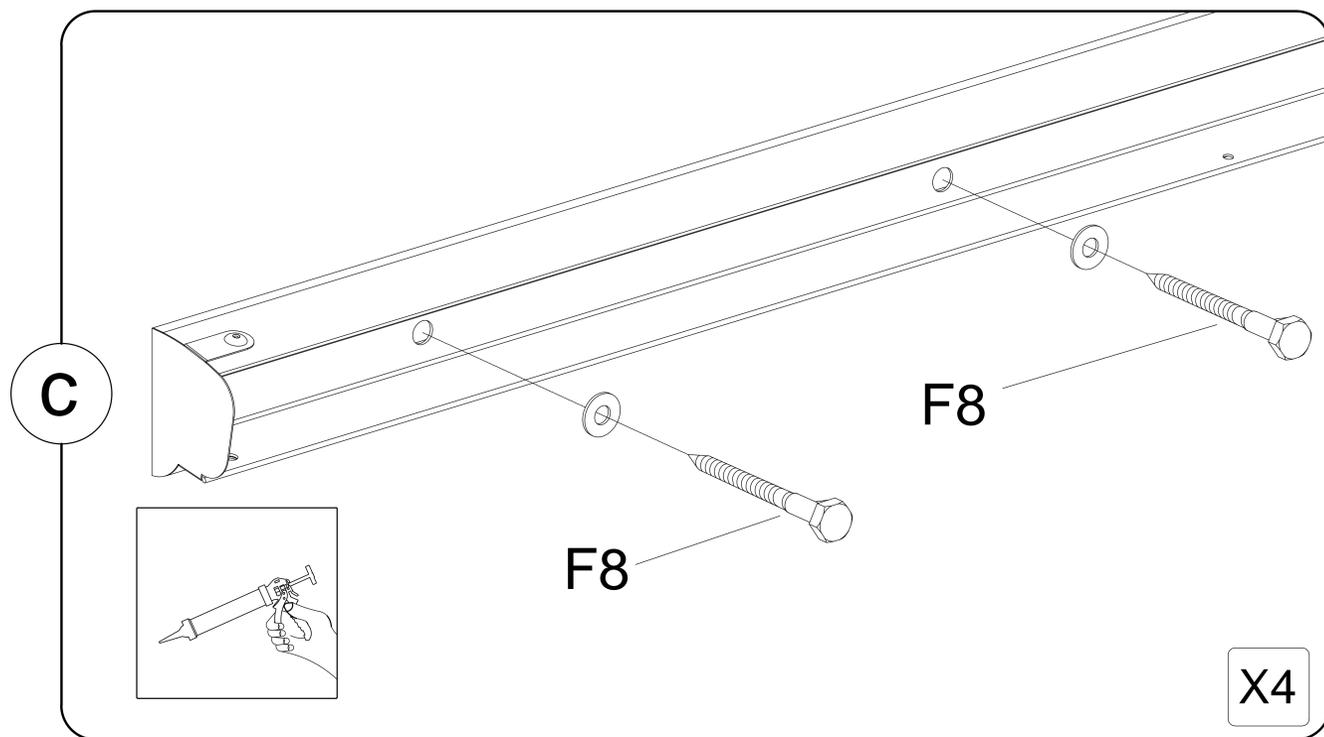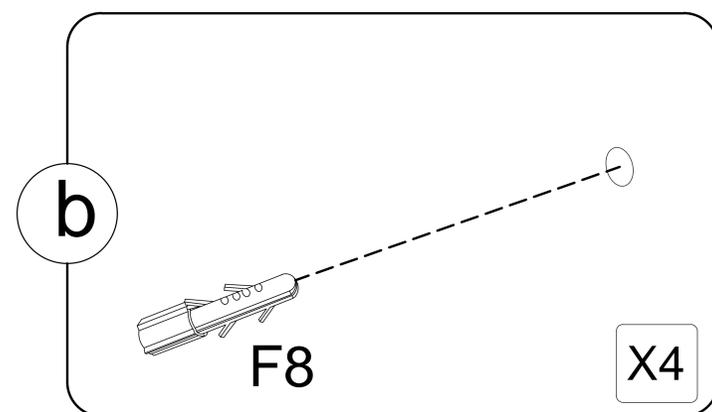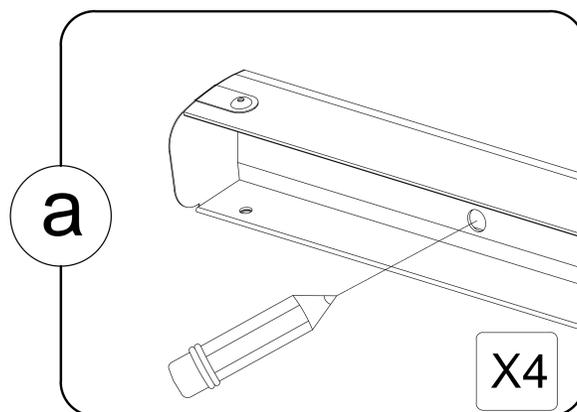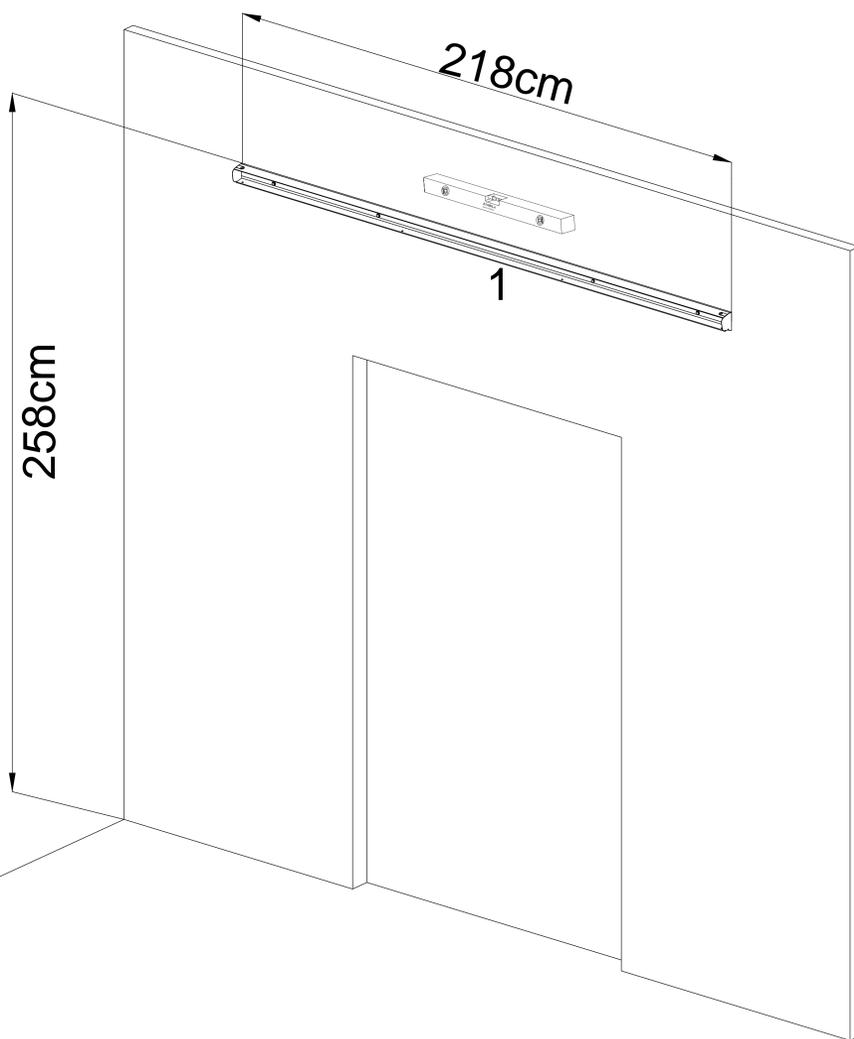


2

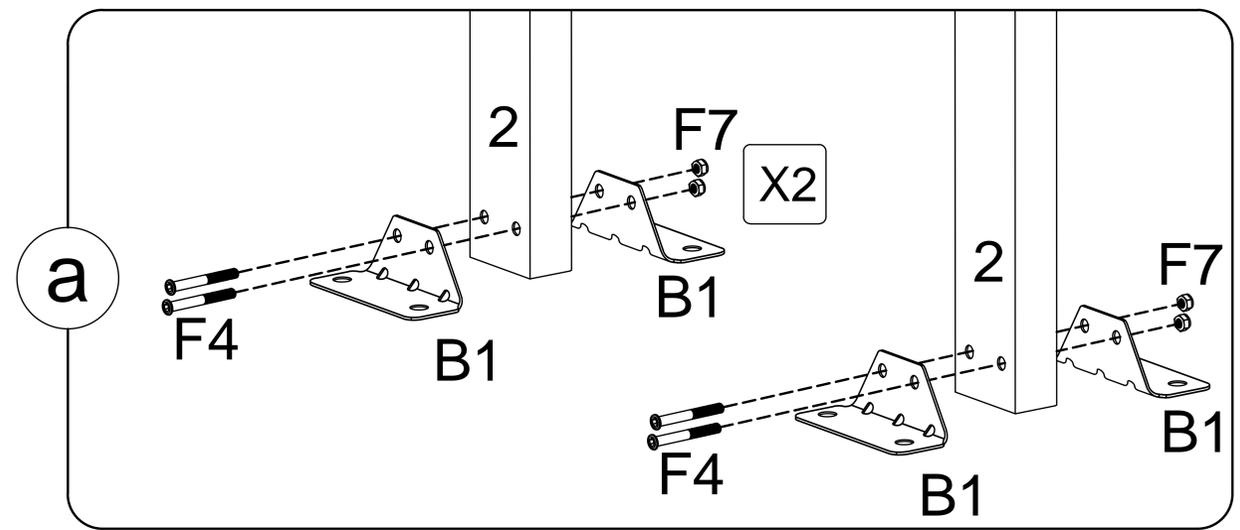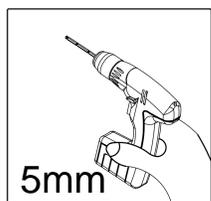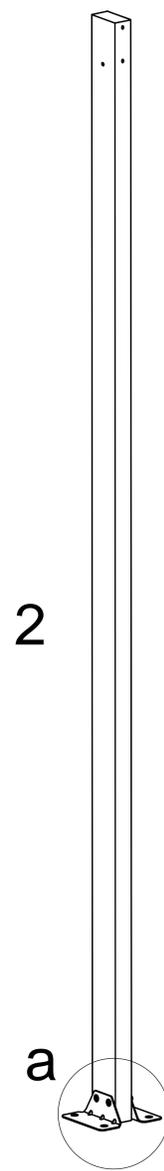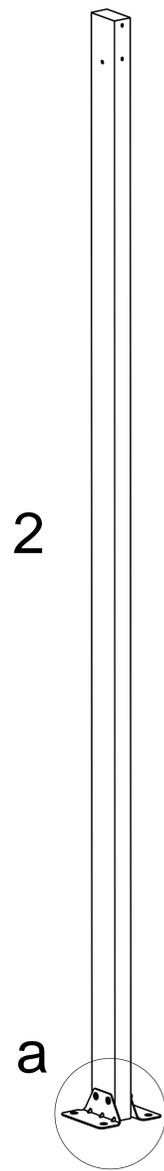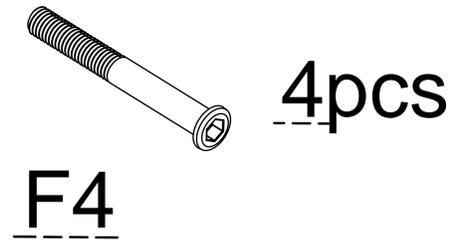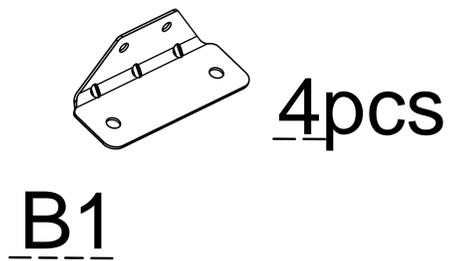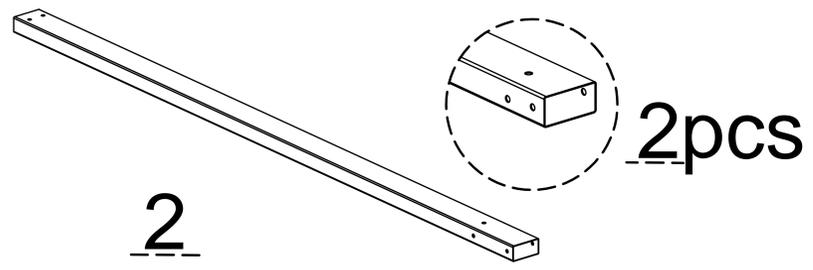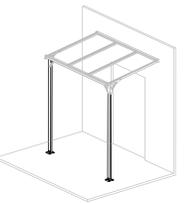

3

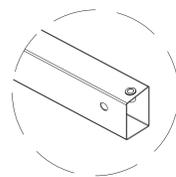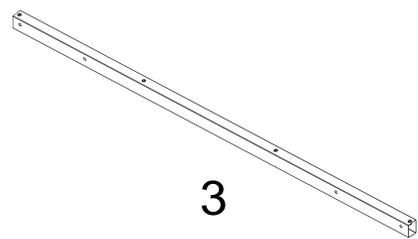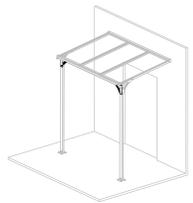


B2L

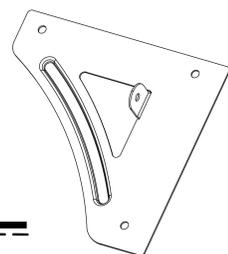


1pcs

B2R

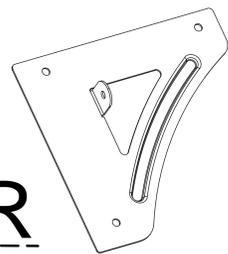

1pcs

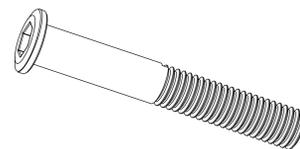





F4

4pcs



F5

4pcs





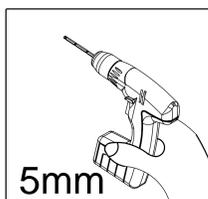
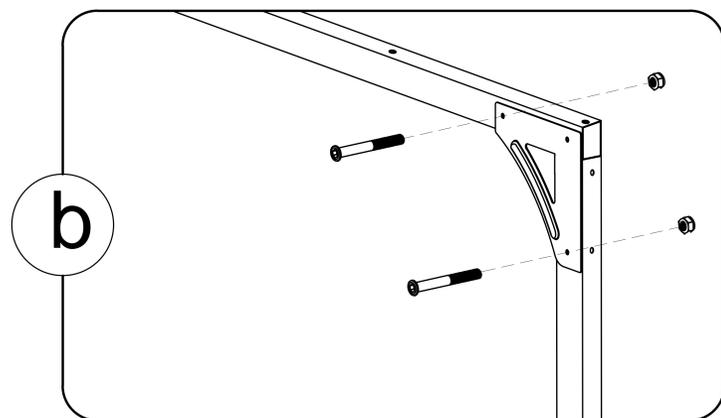
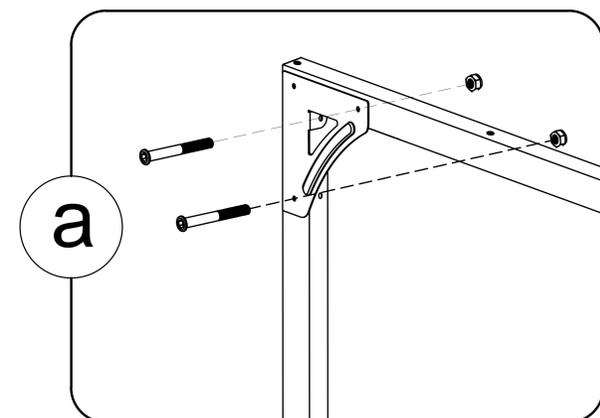
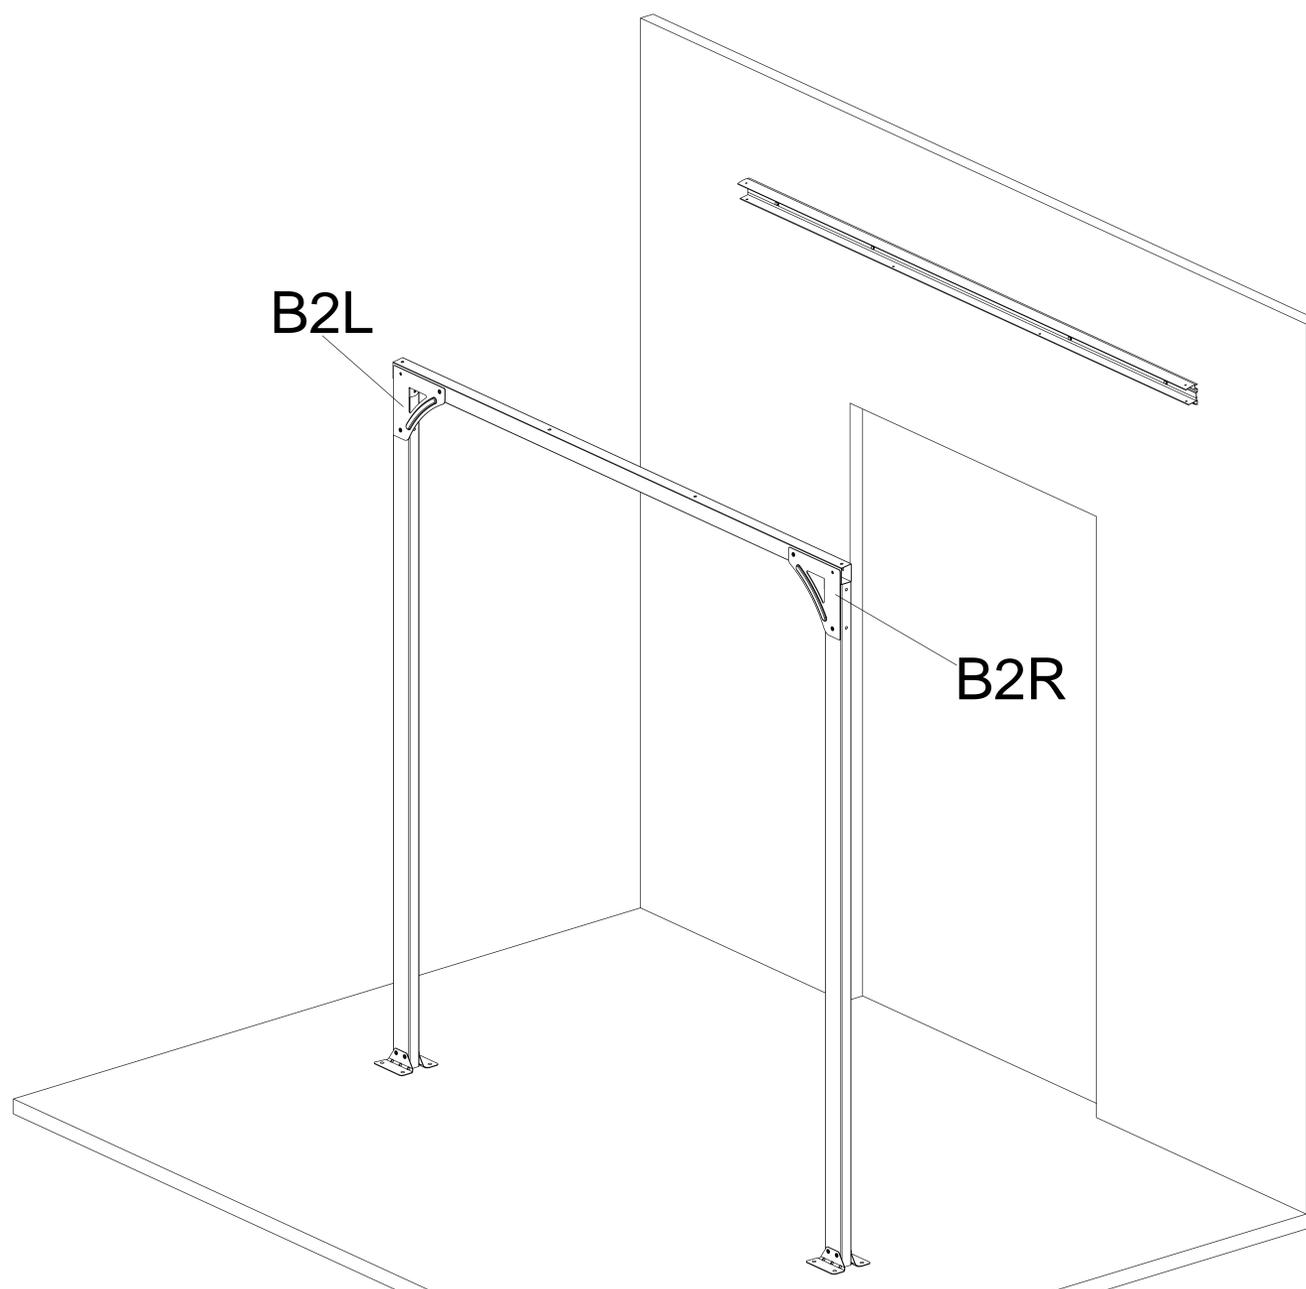


5mm












14mm

4

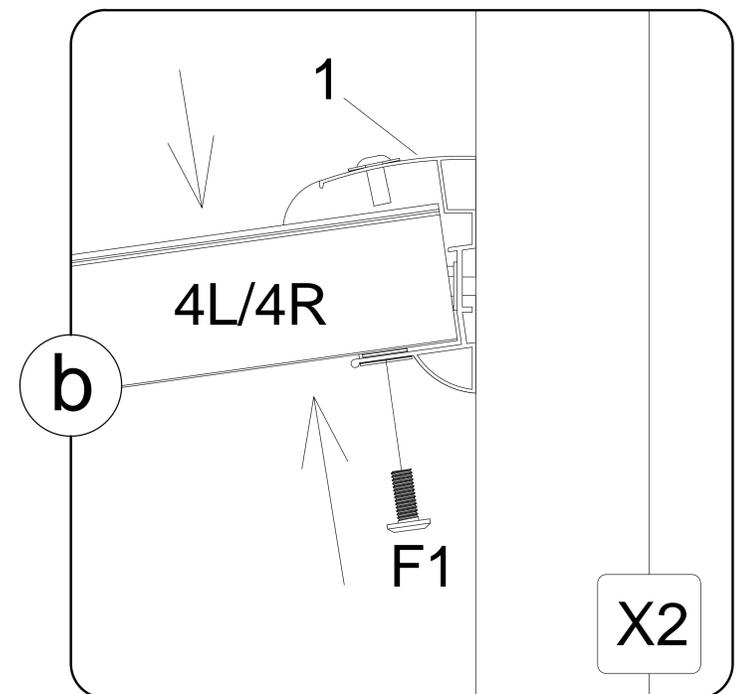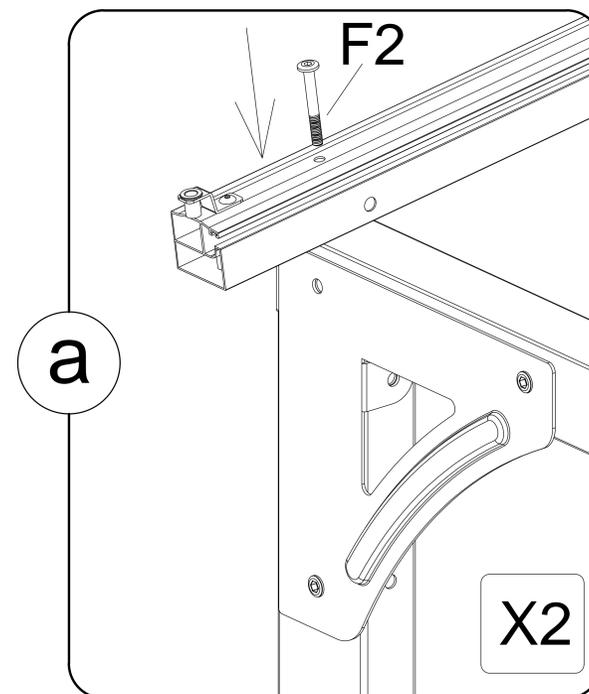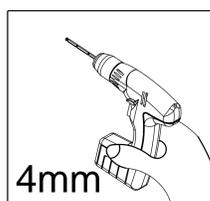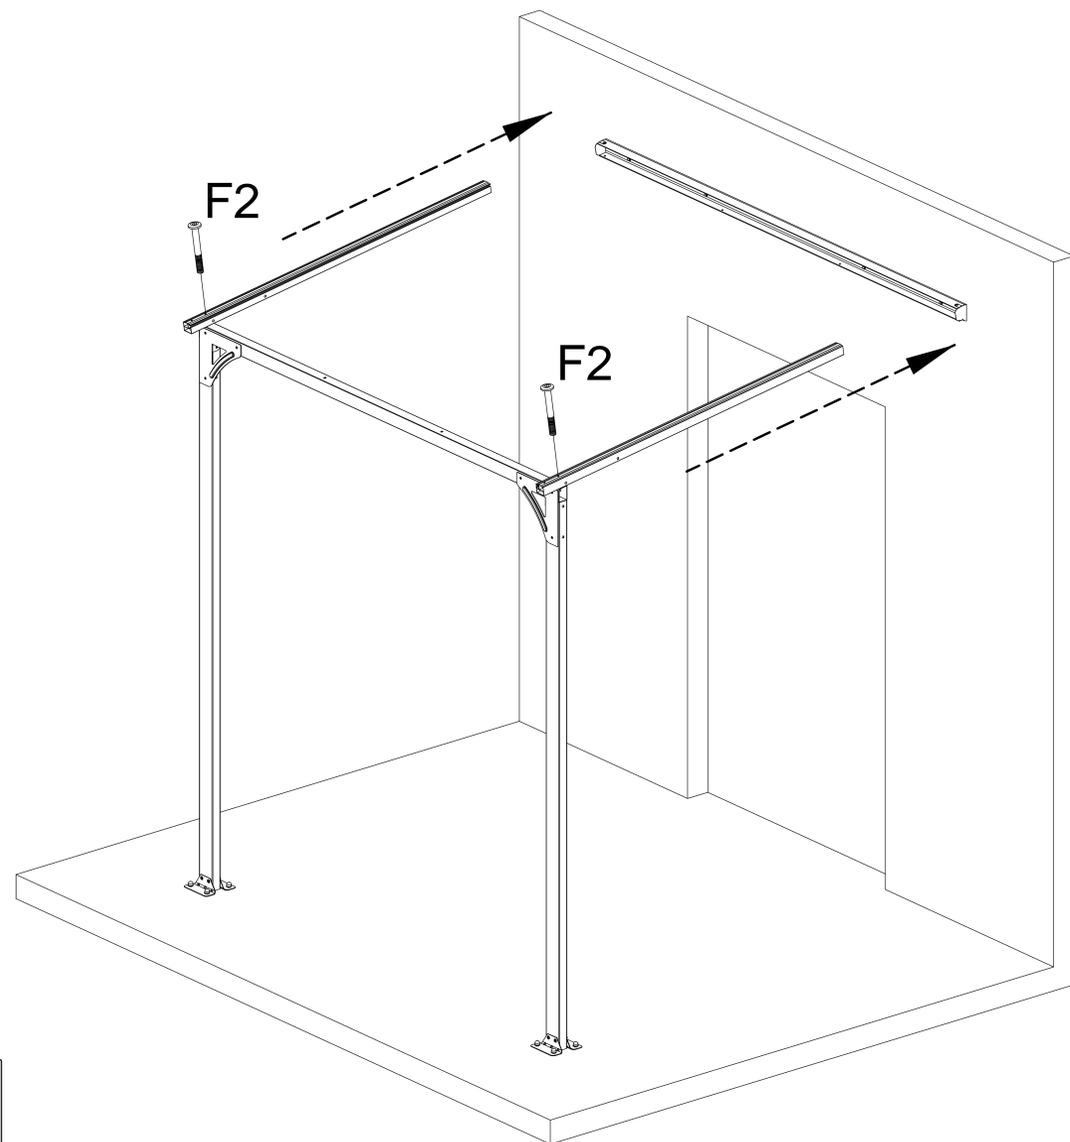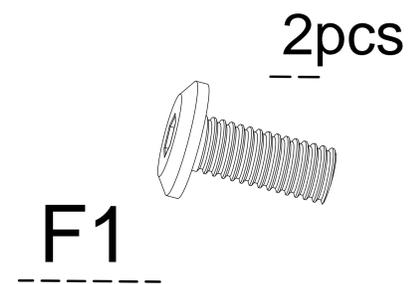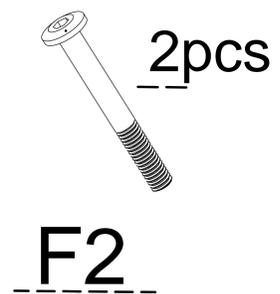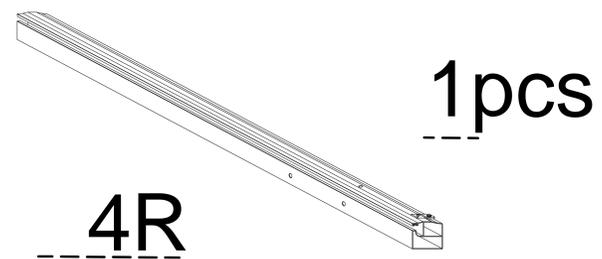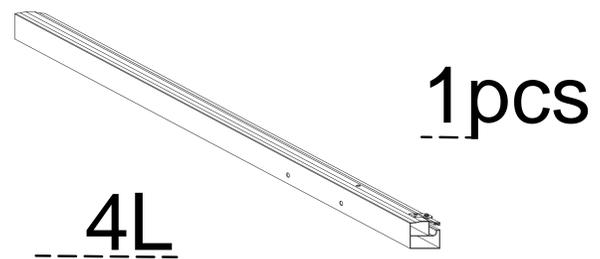



5

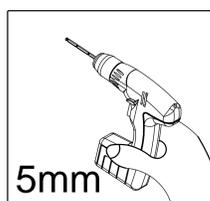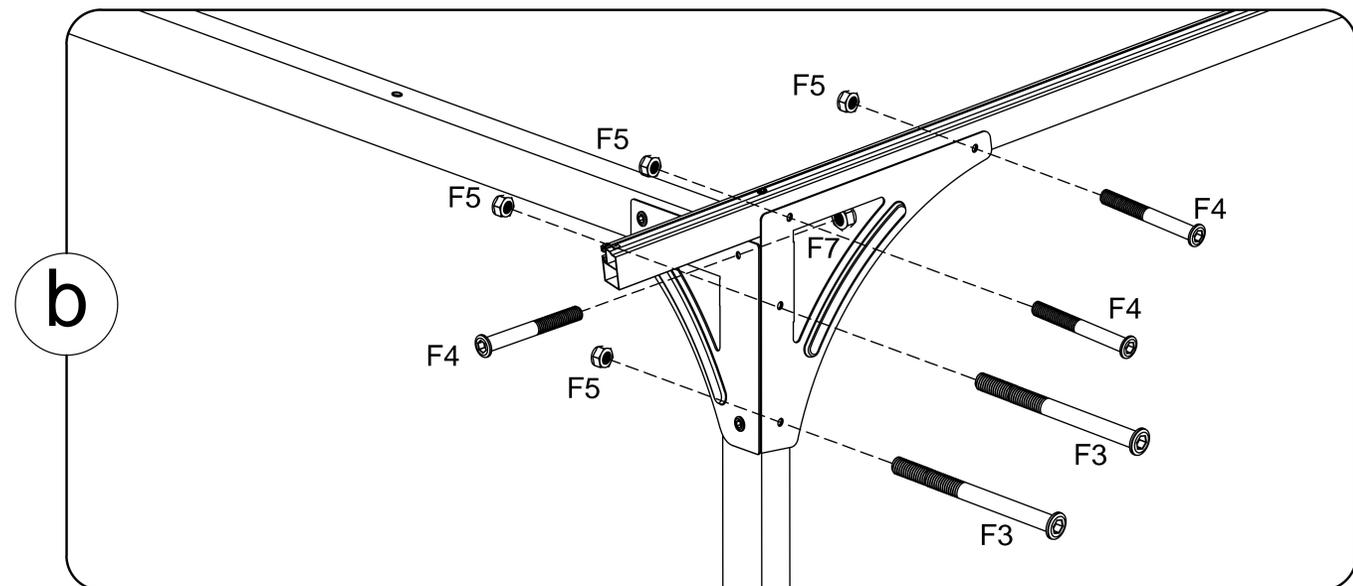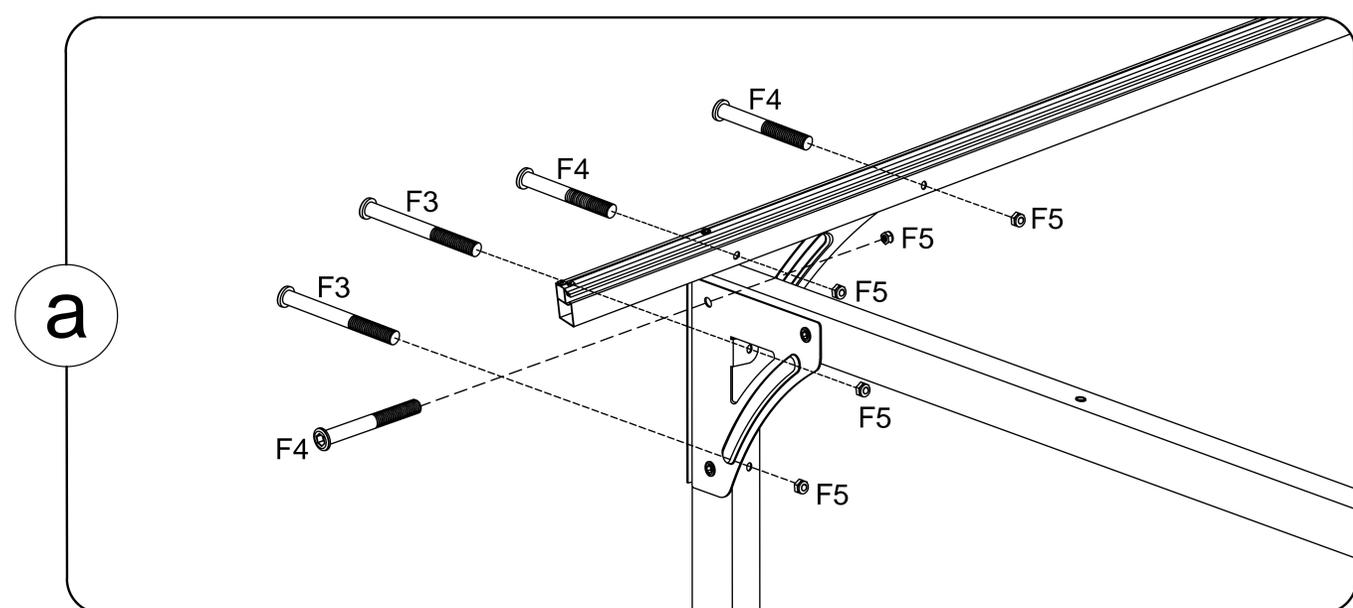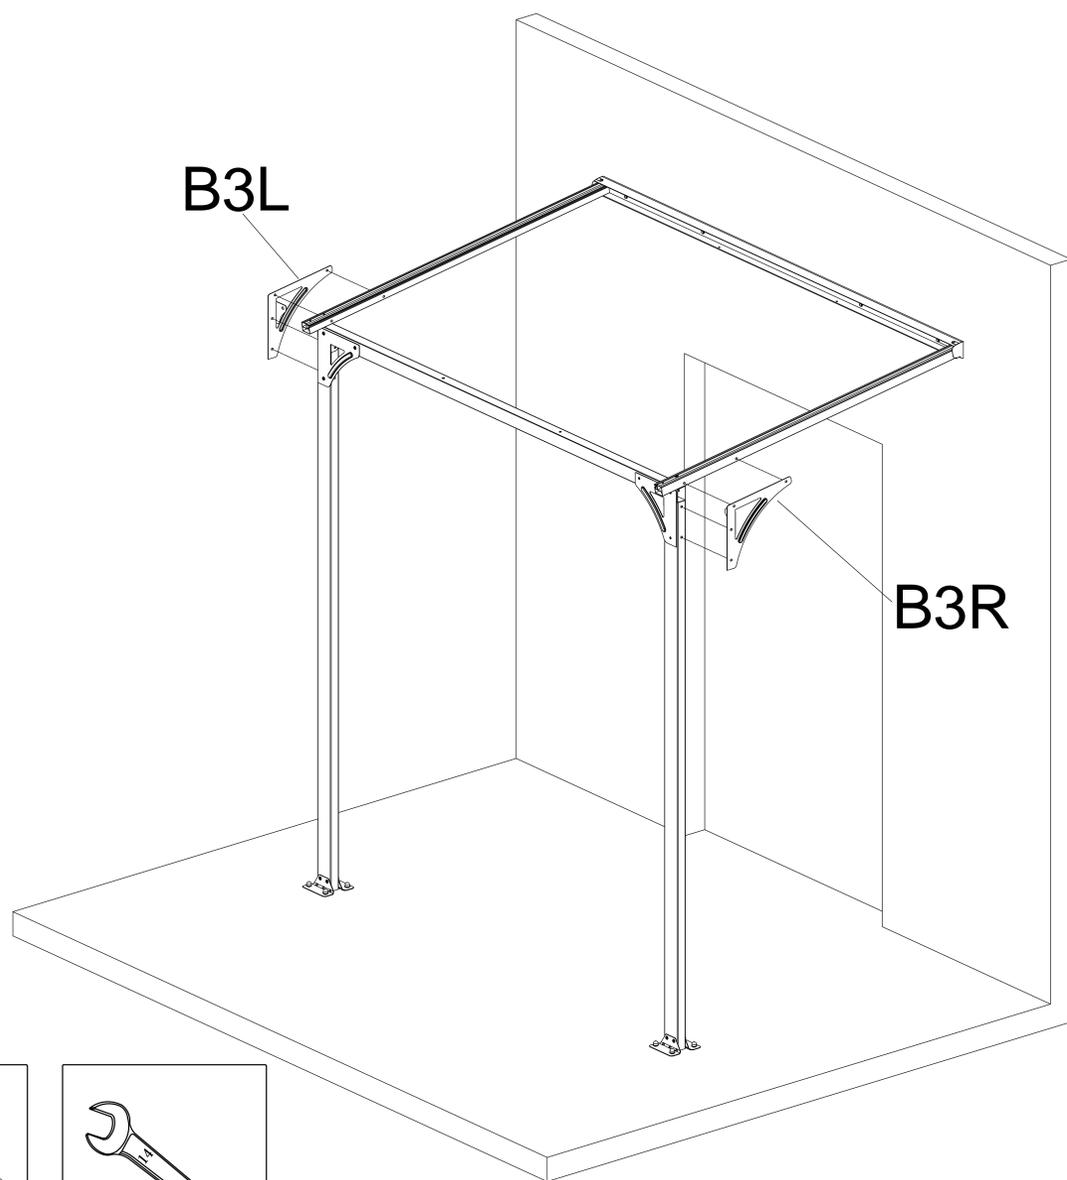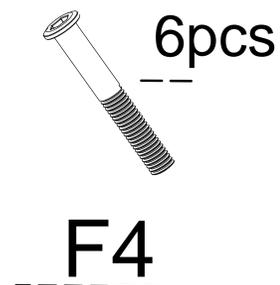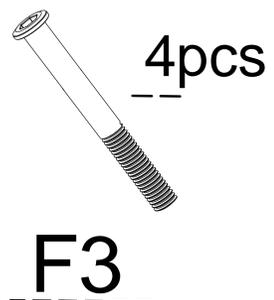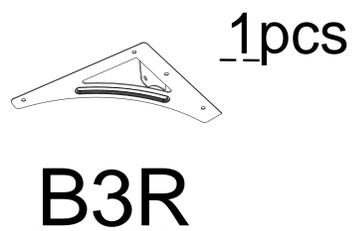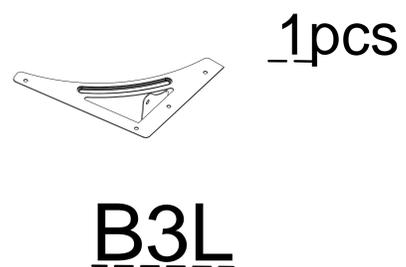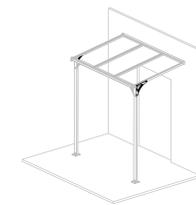

5mm

14mm

6

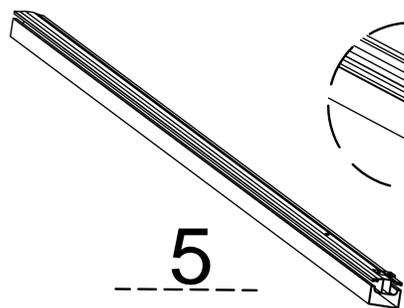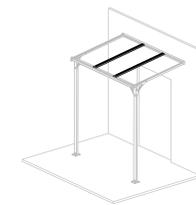


2pcs







2pcs

F2




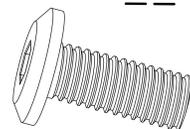


2pcs


F1

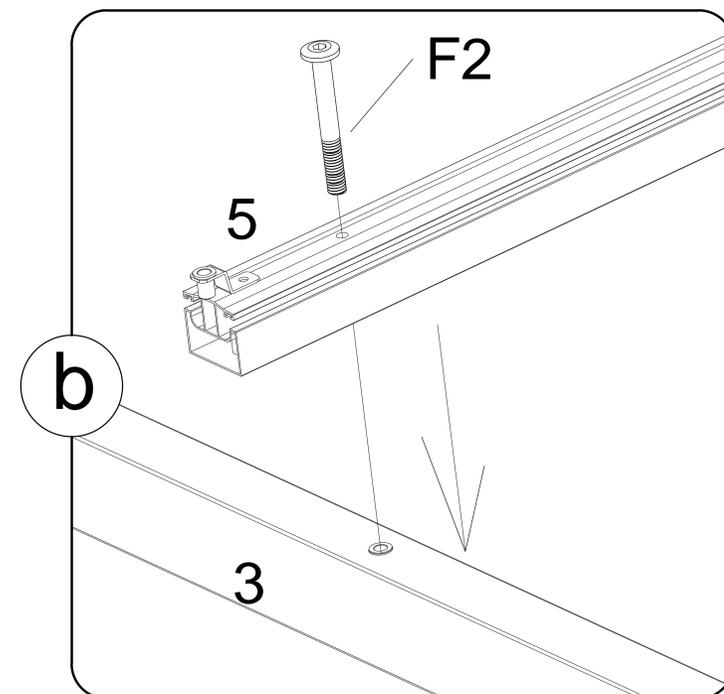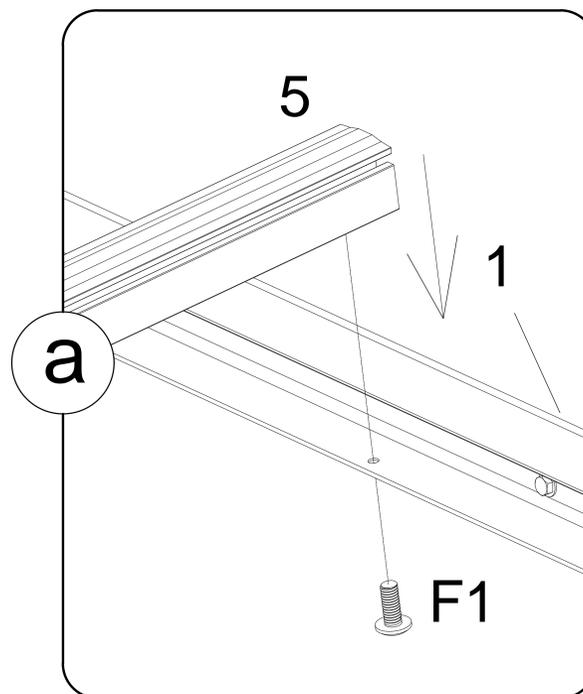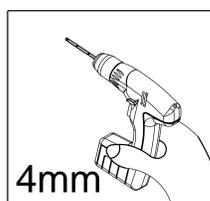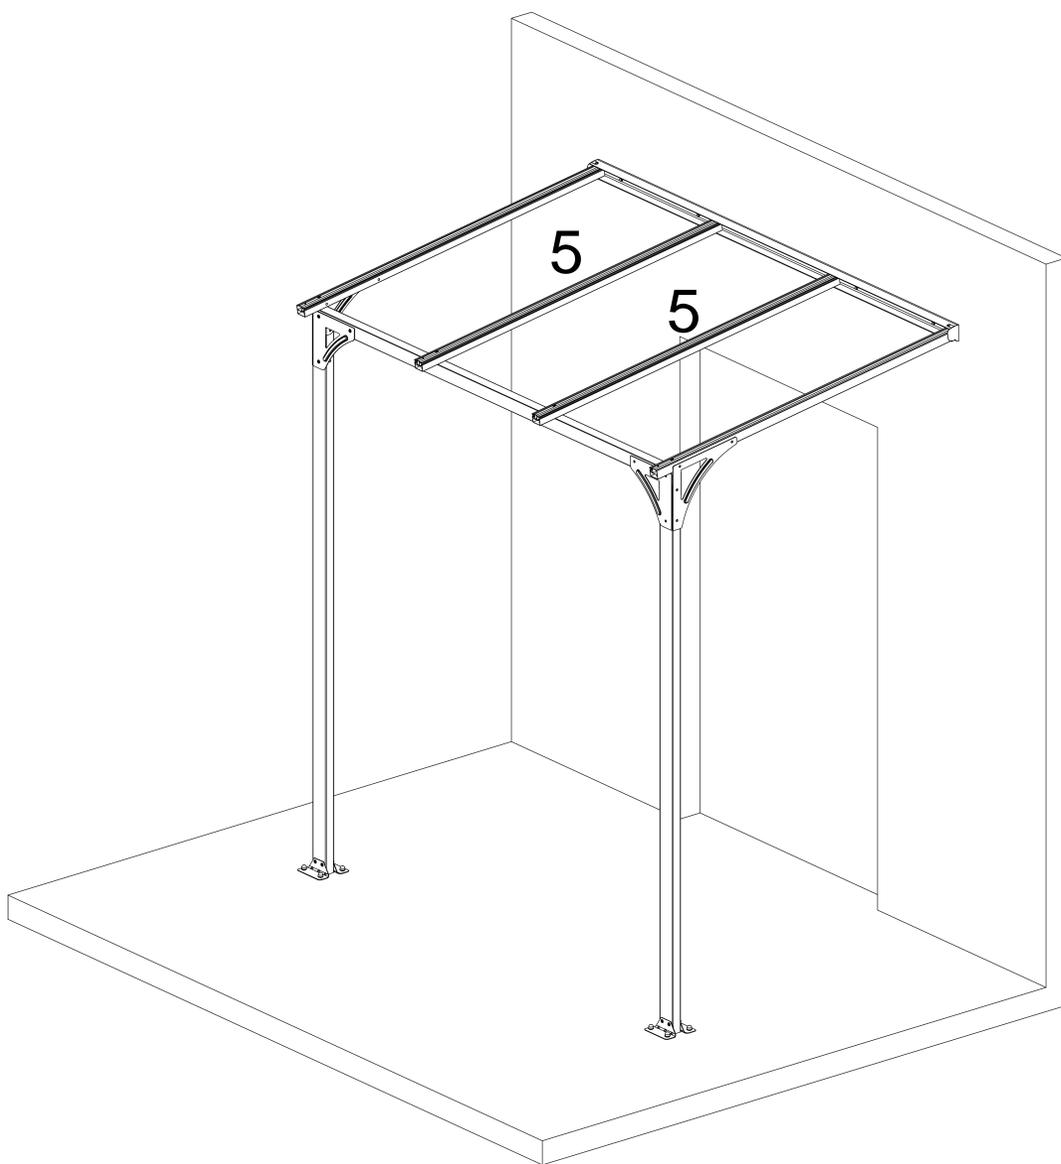

7

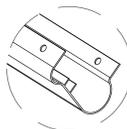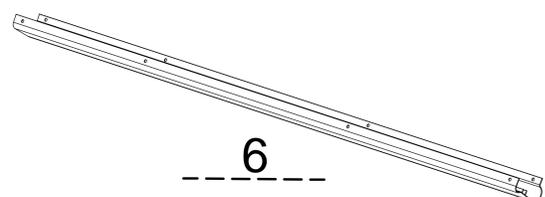
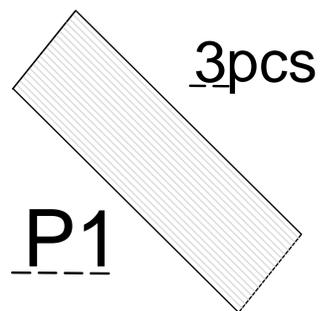
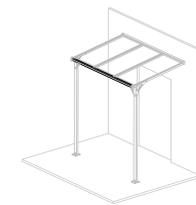


1pcs

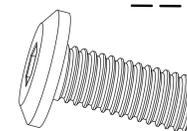

4pcs

F1

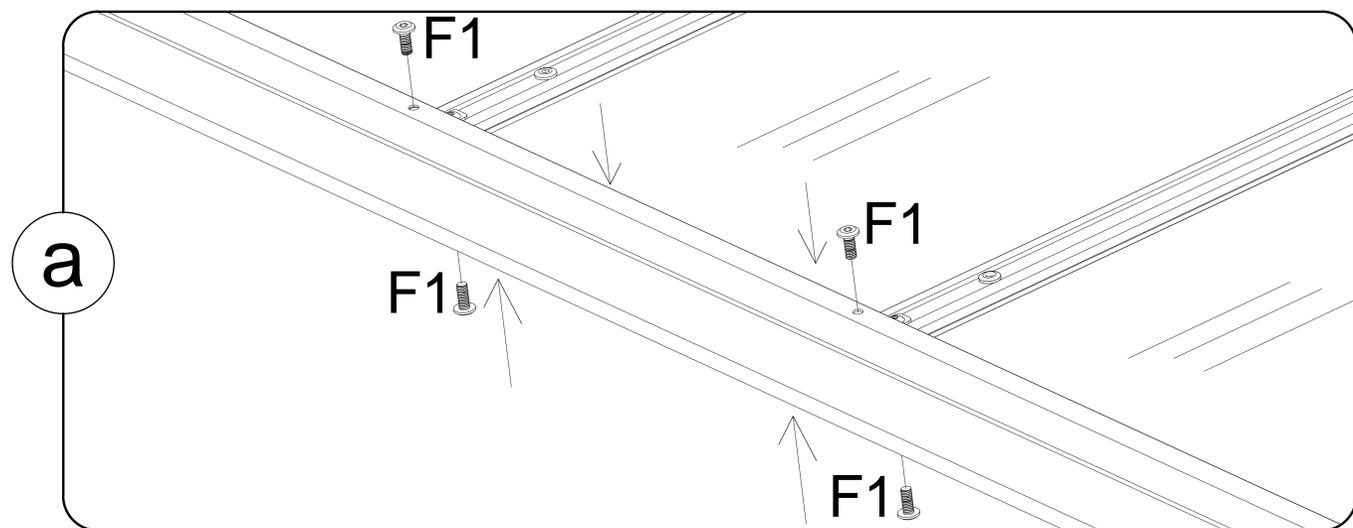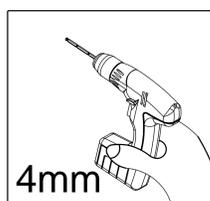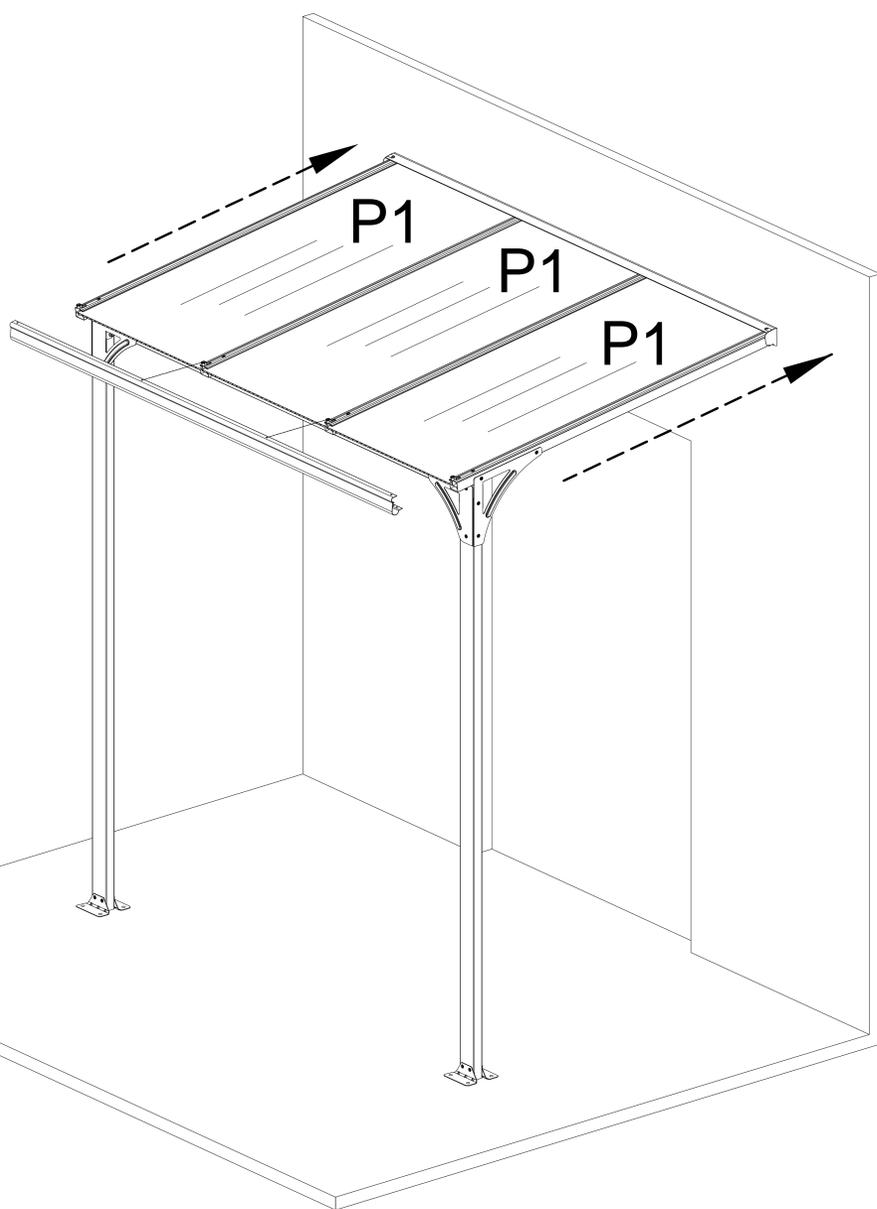

8



1pcs




S1L

1pcs





S1R



4pcs

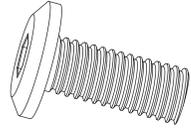


F1

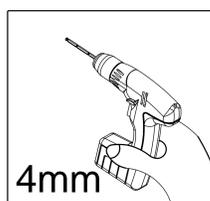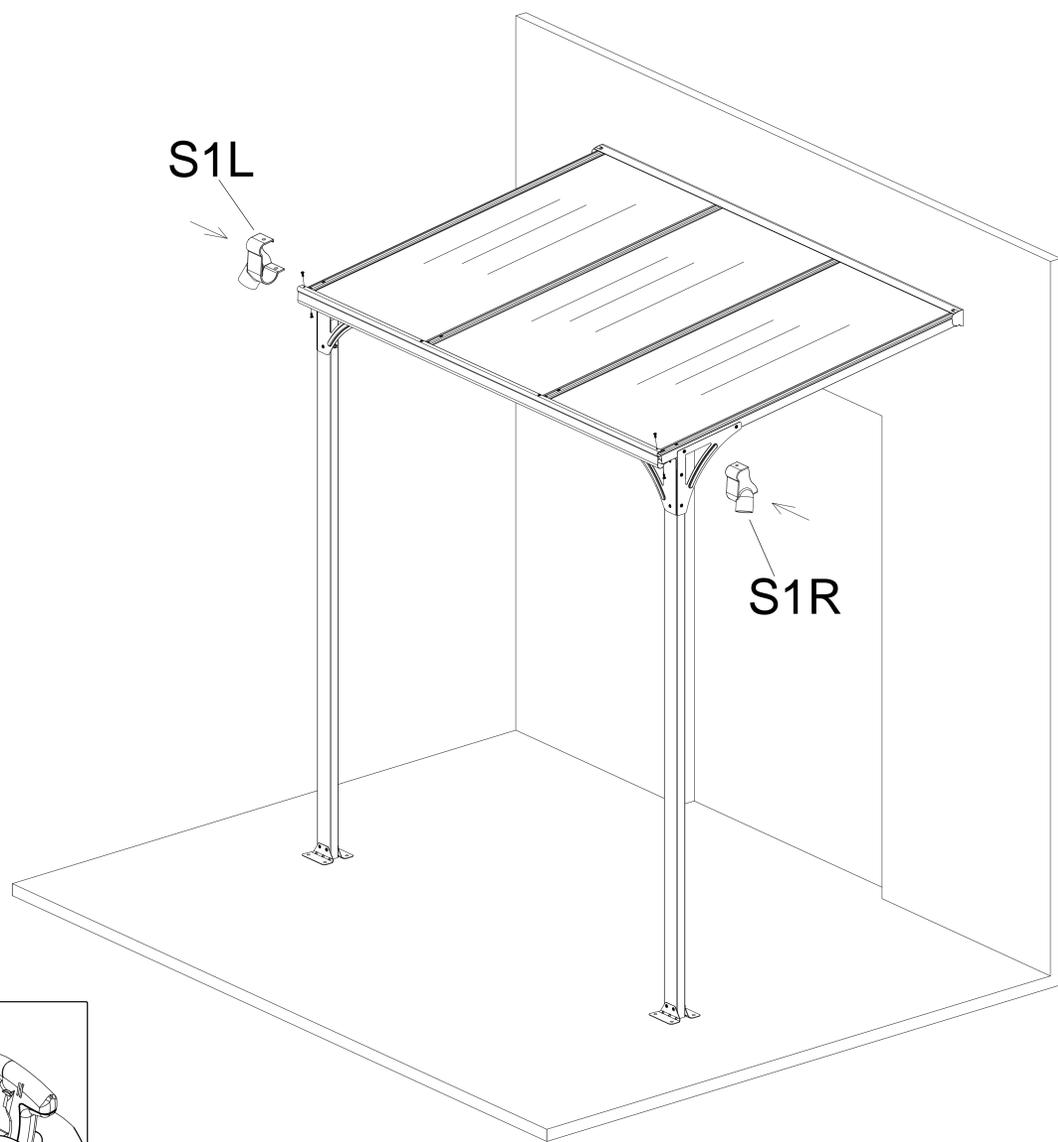


4mm

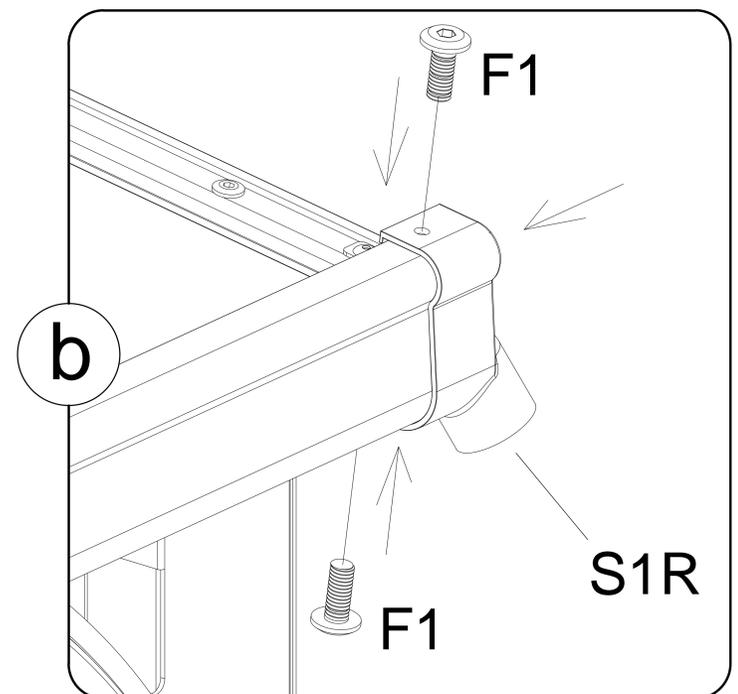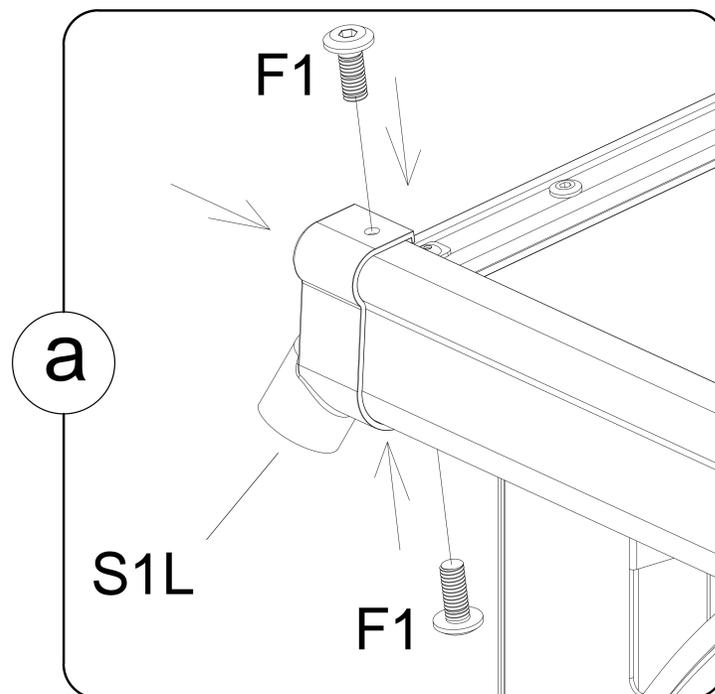

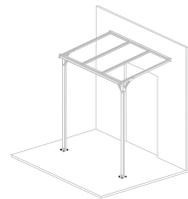

F6











8pcs

F7



8pcs

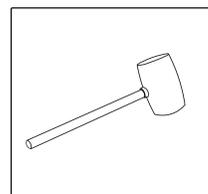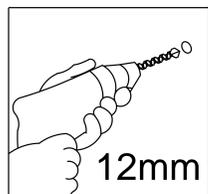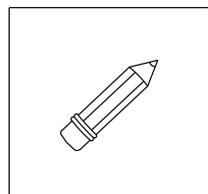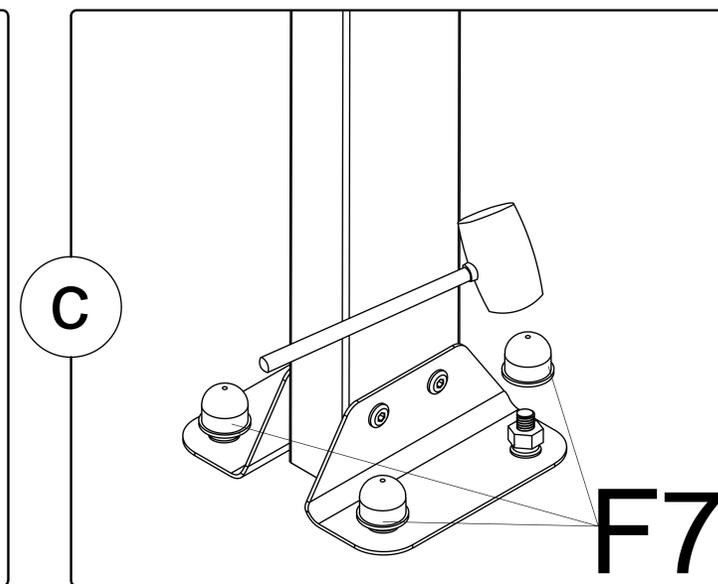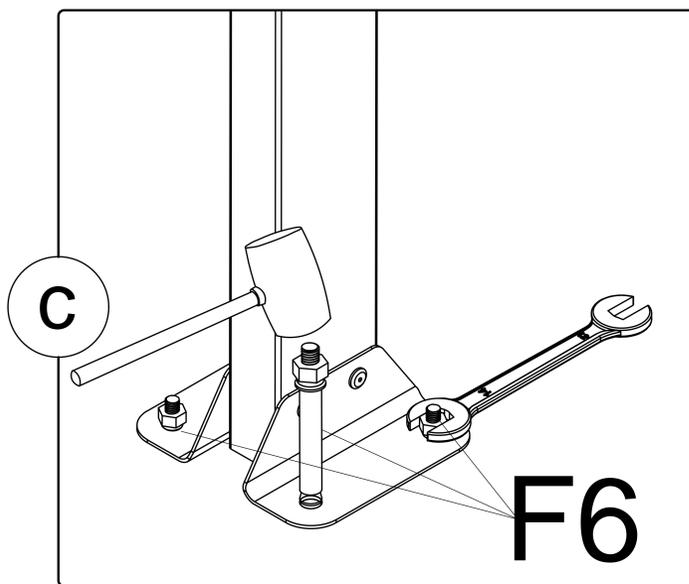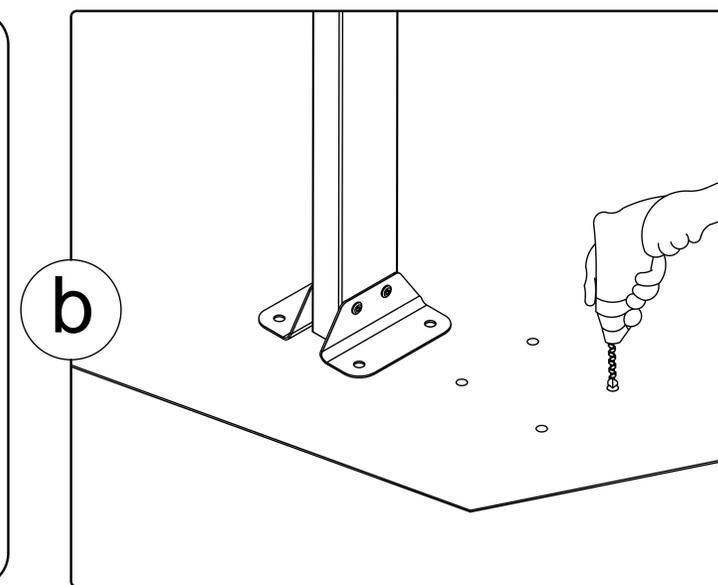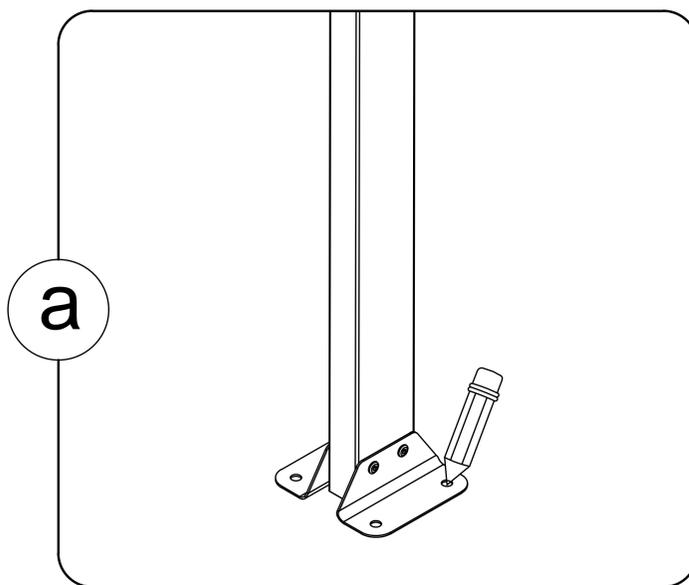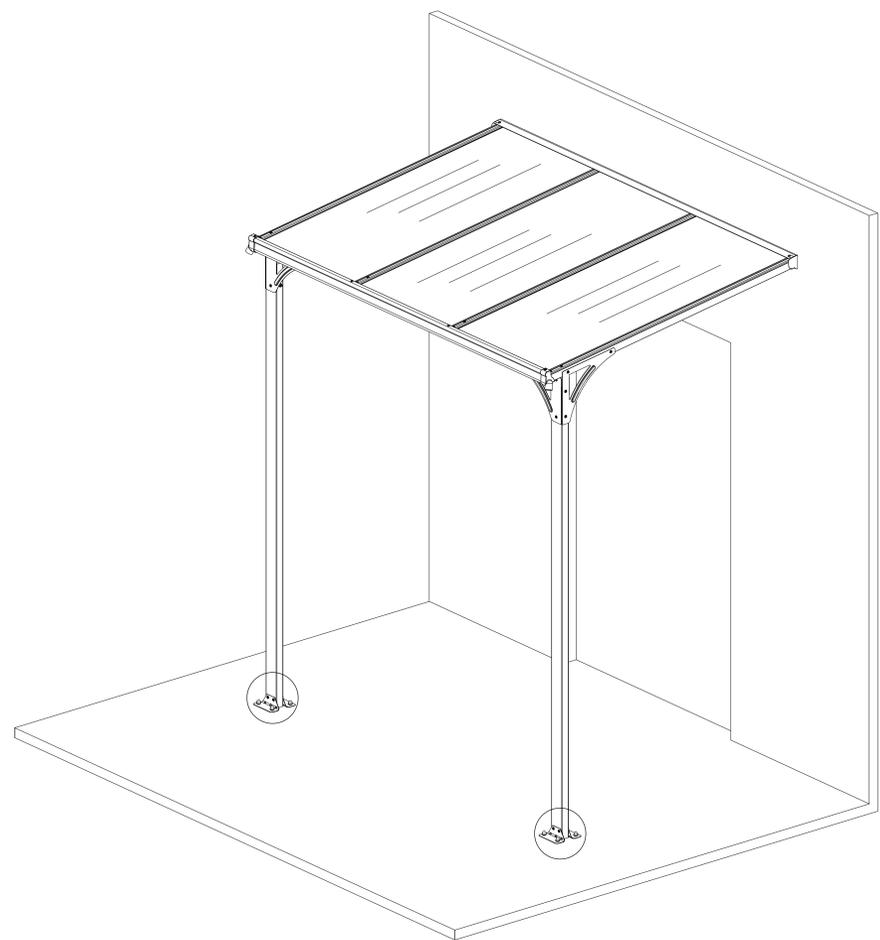

12mm

14mm

F6

F7